1



Remove the bulb seal from the passenger's side rear door.

2



Remove the plastic trim from the passenger's side rear door.

3



Remove the bulb seal and plastic trim from the passenger's side front door.

4



Remove the plastic trim on the passenger's side B-pillar.

5




Re-install the bulb seals to prevent damage during the installation process.

6



Locate and unplug the B-pillar plug.

7

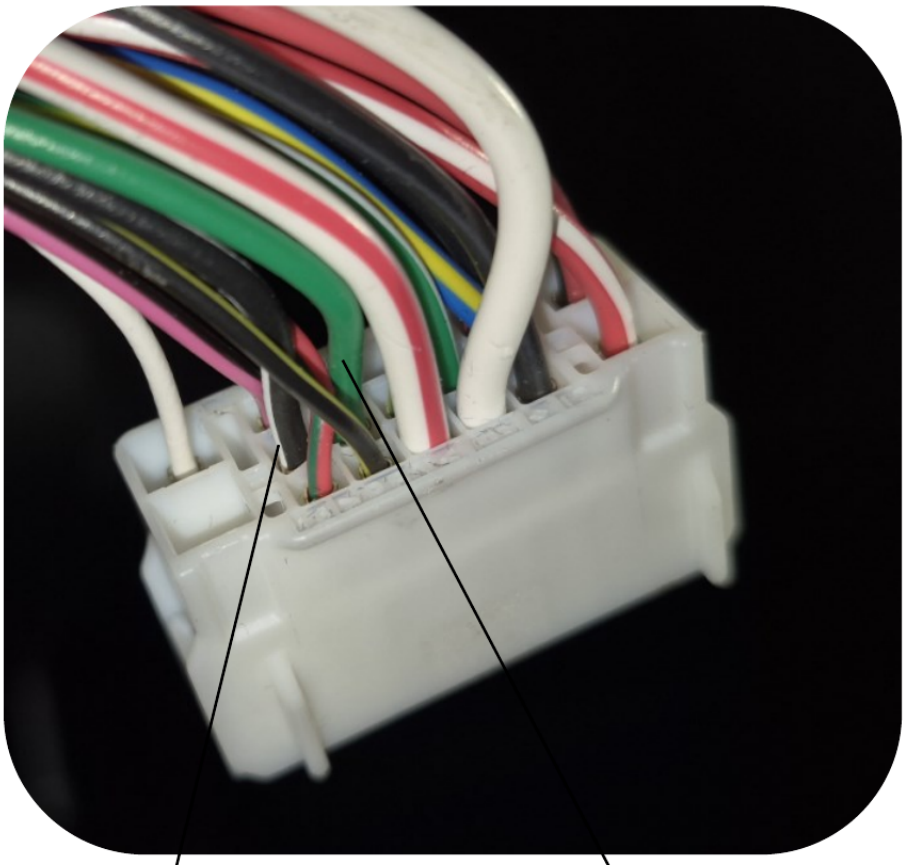

Identify the following wire colours:

Green (no stripe) = Unlock

Black (white stripe) = Lock

8




Place one of the provided white clips over the green wire.

9



Feed the wire labelled 'Unlock' into the clip alongside the Green wire.

10

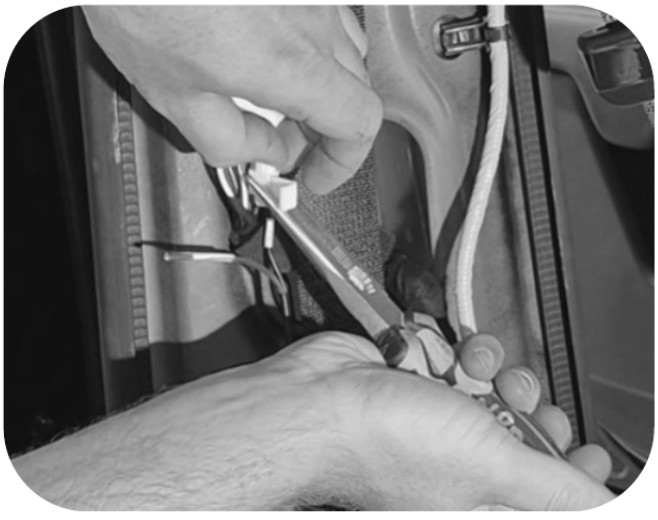

Squeeze the clip until the metal paddle is flush with the plastic.

11



Close the clip.

12



Repeat steps 8-11 to connect the 'Lock' wire to the Black/White wire.

13



Tape the clips closed and bundle the connection.

14




Re-install the plug to the B-pillar.

15



Lift the rear seat.

16

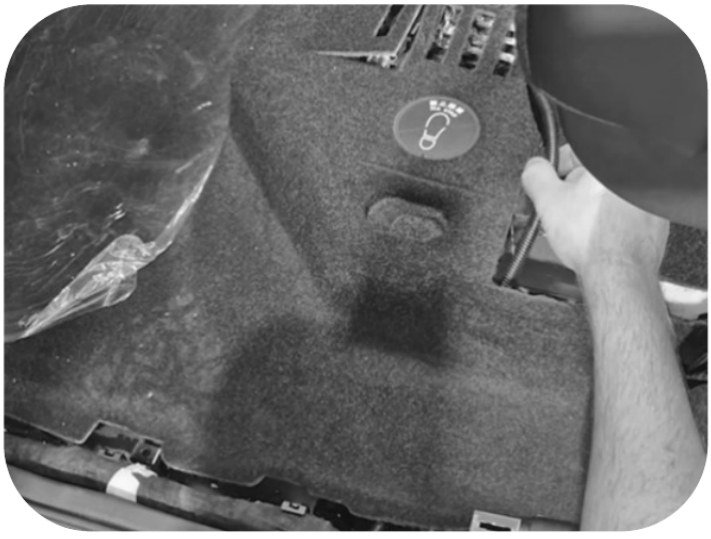

Feed the power and ground cables under the carpet to the battery under the rear seat.

17



Remove the plastic cover from the battery positive terminals.

Battery is below the rear seat on the passenger's side.

18



Connect the power terminal to the battery positive.

The power terminal is the branch with a fuse on it.

NOTE: the battery stud with no wire connected to it does not have power—use one of the studs with a wire attached.

19



Connect the ground terminal to the battery negative.

CANOPY INSTALLATION INSTRUCTIONS START BELOW:

29



Remove the bolts holding the plastic caps along each side of the tub.

30



Carefully remove the plastic caps.

The caps are held in with clips which pop out if the cap is firmly prised upwards.

31



Remove the bolts holding the plastic cap along the front of the tub.