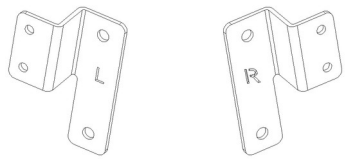
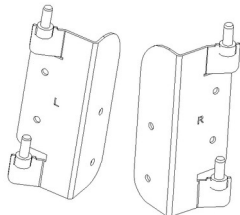
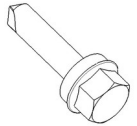



Installation Instruction for Swing box

Before Installation


Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
Please periodically check and retighten all the hardware and clean the investment for a refresh look.
The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

PART LIST


1  Storage box (L&R)	2  Front brackets (L&R)
3  Rear brackets (L&R)	4  Fastener Hexagon socket screw assembly (M6_25) X4
5  Spanner S=4	6  Fastener Hexagon socket screw assembly (M8_25) X8
7  Spanner S=5	8  Fastener screw (M6.3_19) X4

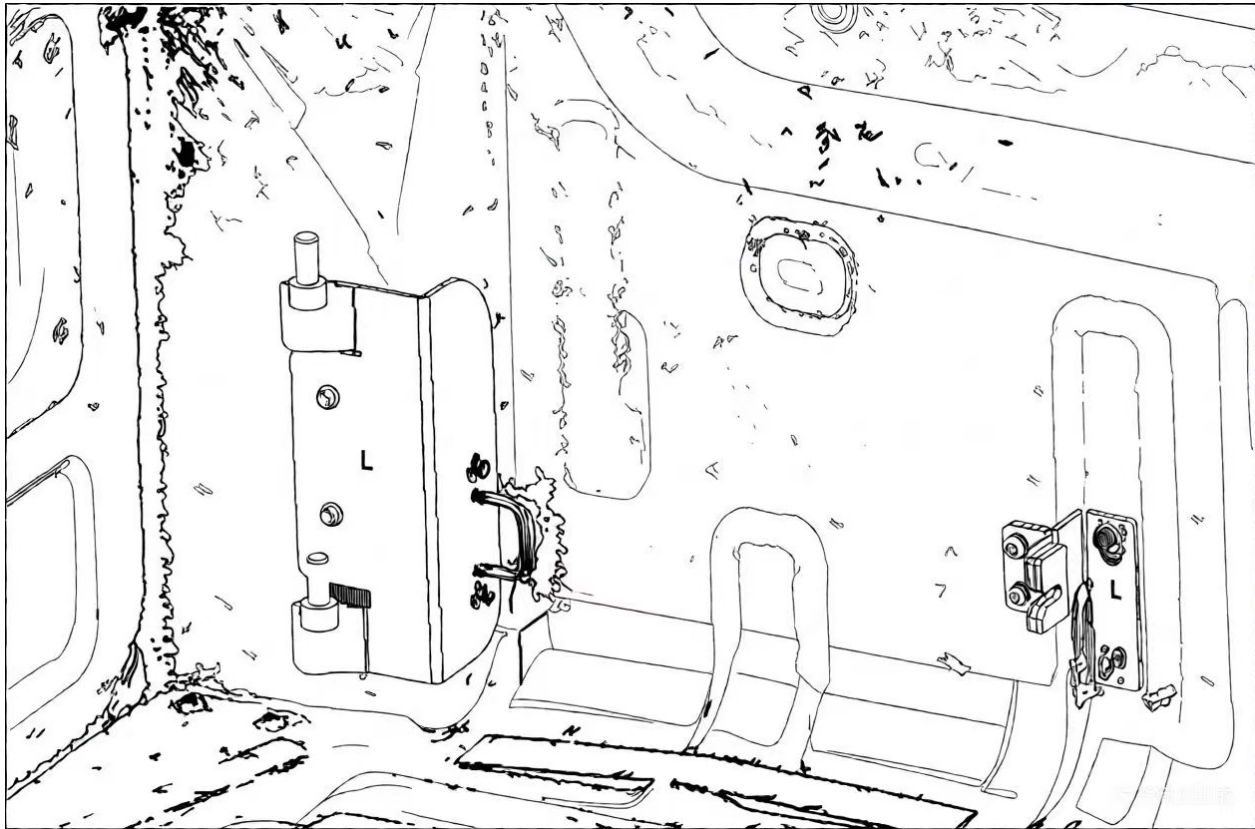

Step 1: Use 4 bolts (M6_25) to connect the front bracket (small bracket) with lock latch, and install it in the direction as shown in the figure below: mirror images for left and right

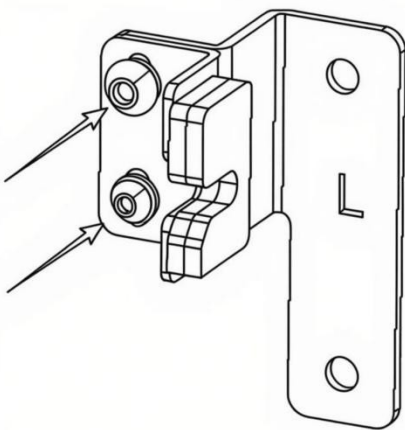


Left part

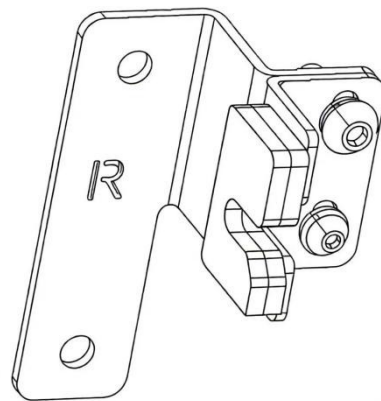


Right part

Step 2: Install the big bracket, from Figures 1 to 2 as below:




Firstly, remove tie down point bracket and use the original car bolt or the M8 bolts we provided (M8_25) to install the bracket, customer may install the tie down point back;

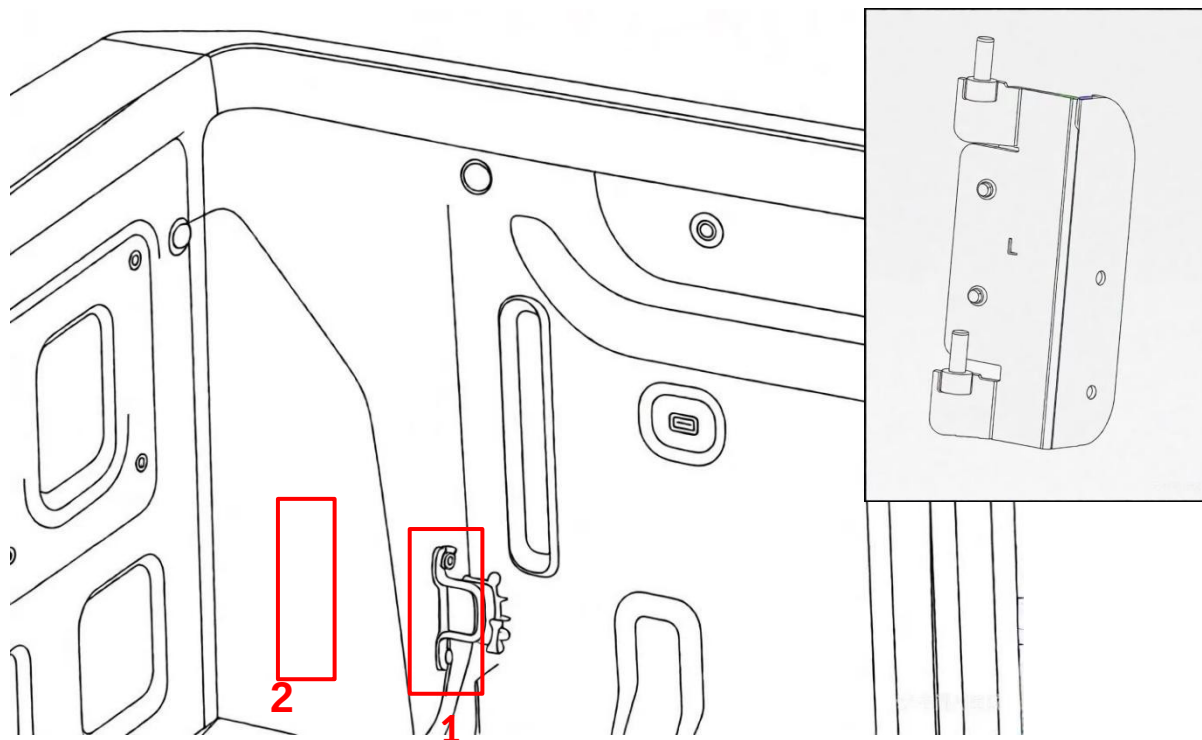




Secondly, use (M6.3_19) to drill holes for the bracket

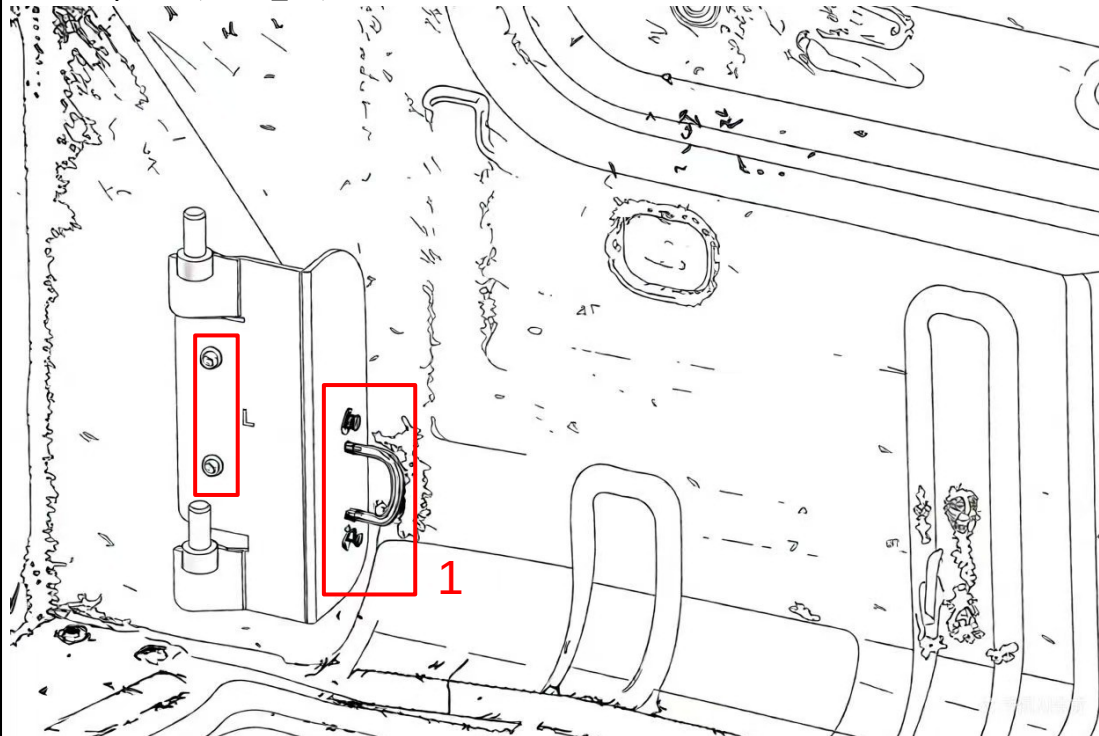

Step 3: Install the front bracket (small bracket): to remove the tie down point bracket, use the original car bolts or the (M8_25) provided by us to lock and assemble it to the ute tub/ truck bed. **Don't put the tie down point bracket back;**

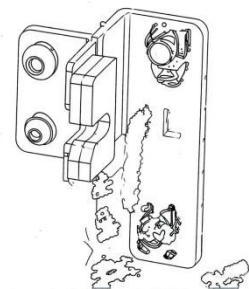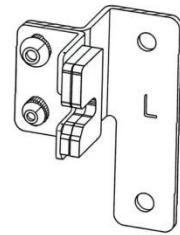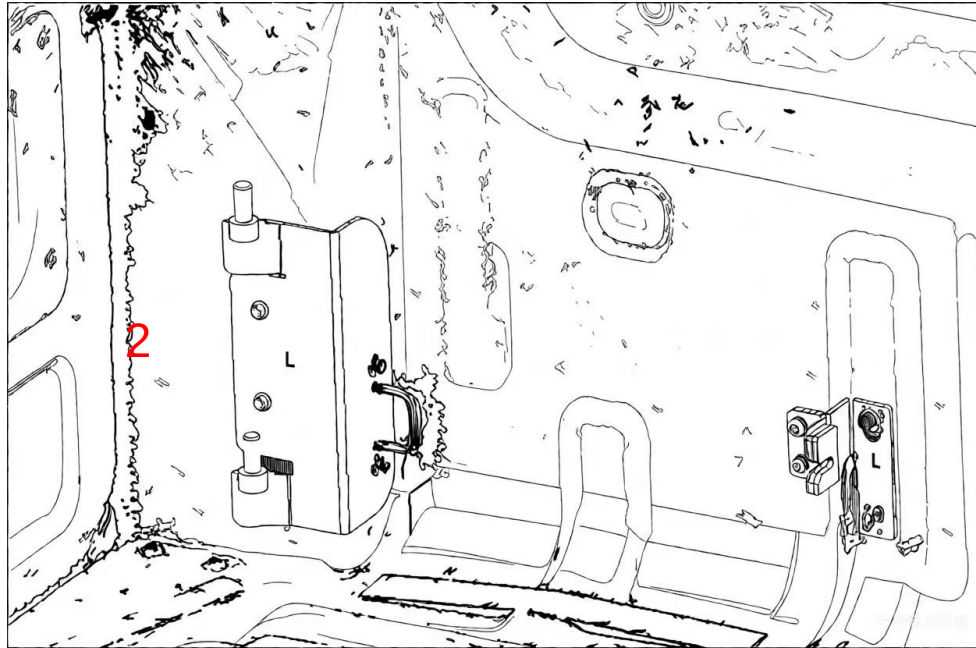

Step 4: Put the tool box on the bracket (from up to down):

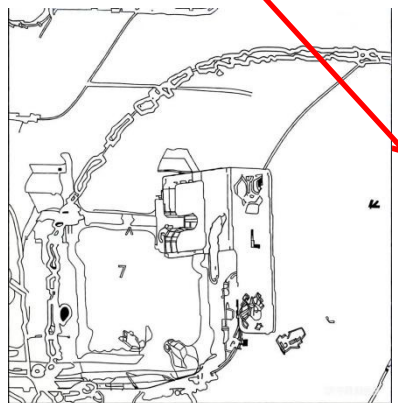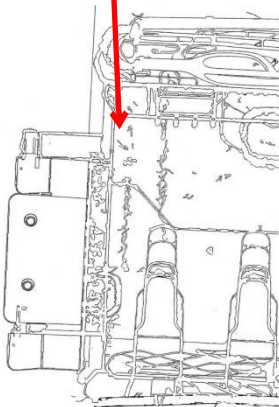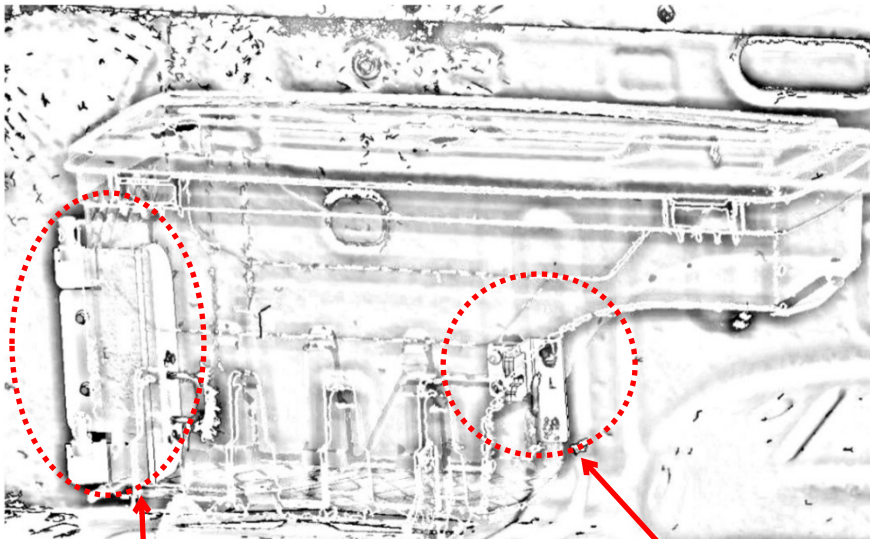

For now, the installation on the left is completed, same way for the right hand side.

