

Fitting Instructions
Part Number: CRRB
Clamp on cross bars to suit
extended sports bars.

Check contents of kit before commencing fitment and report any discrepancies


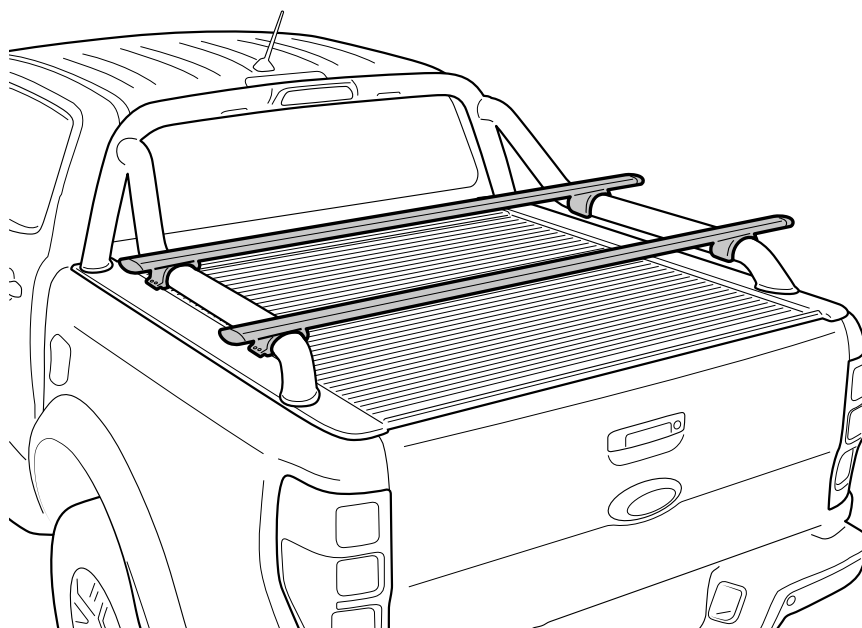




**Image example shown only*

PART NUMBER	DESCRIPTION	QTY	CHECK
VA165B	CROSS BARS (BLACK)	2	
SBC01	CLAMPS	1	



Thoroughly clean installation areas.

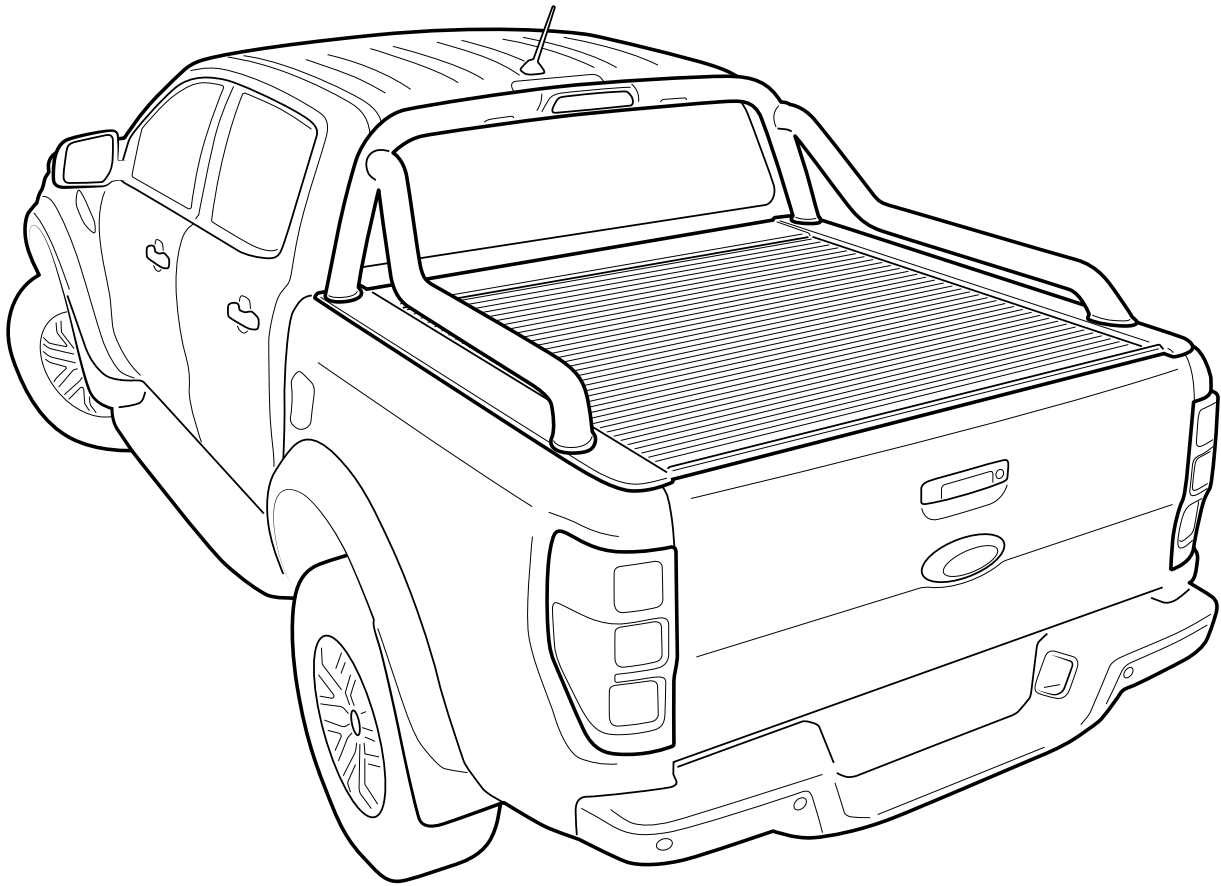


Apply the clear protective film provided in the clamp to the sports bar leg, as per diagram.
Repeat on all 4 points.

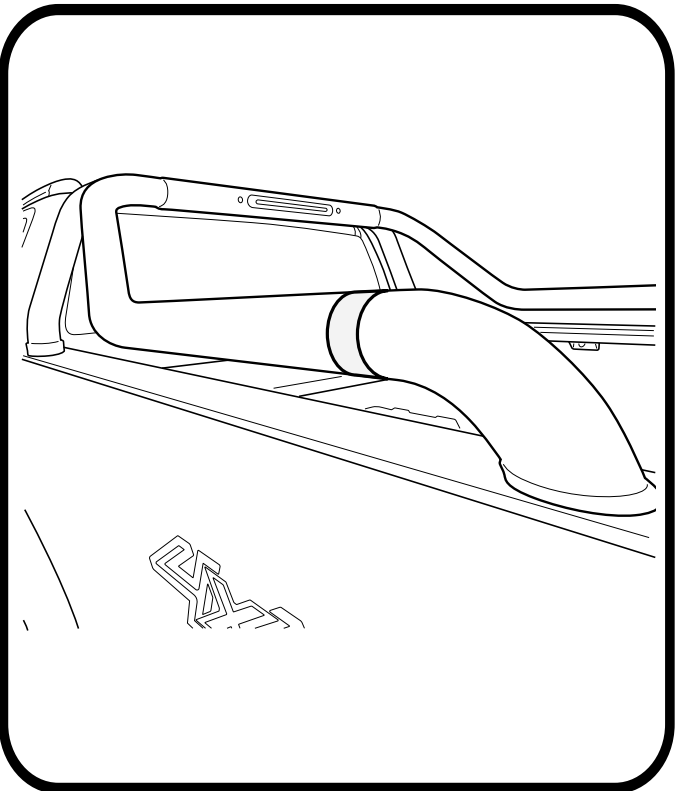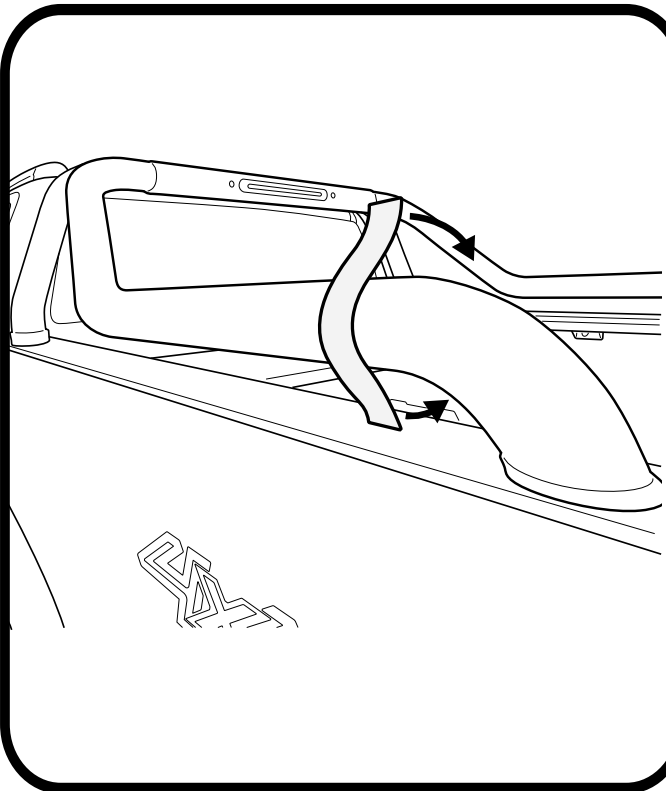



Fit clamp to the sports bar leg as per diagram.
Repeat on all 4 points.

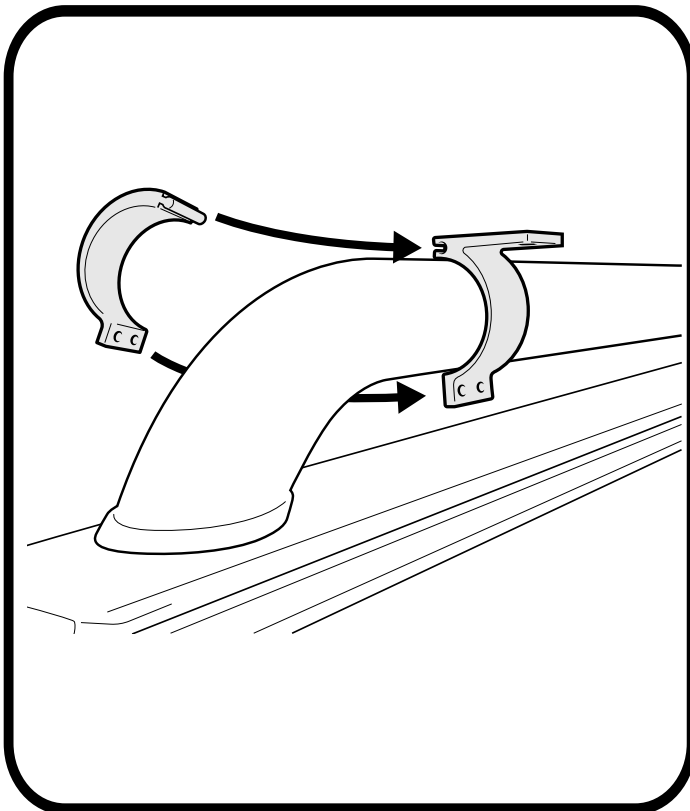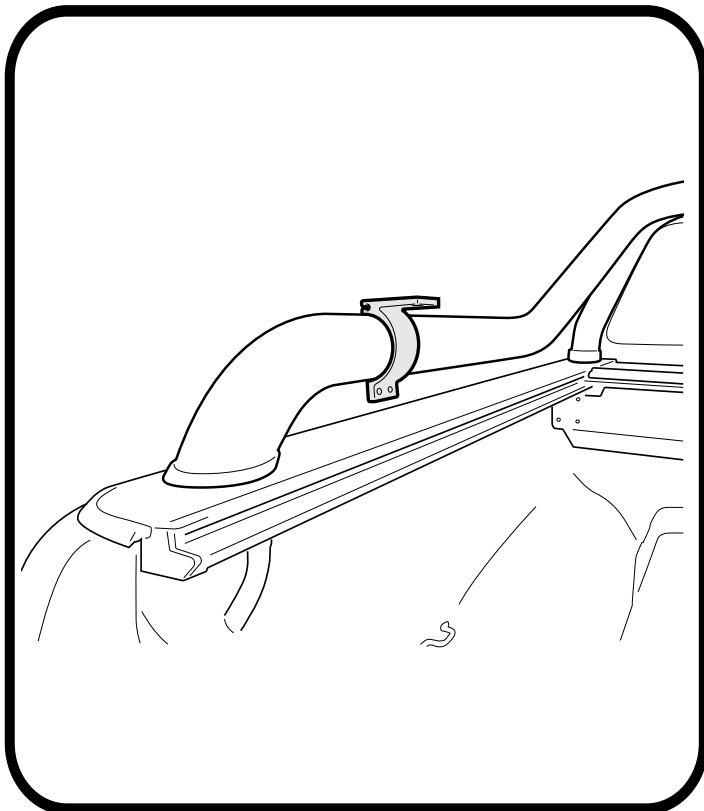

Line up the 2 parts of the clamp to align with each other.
Repeat on all 4 points.

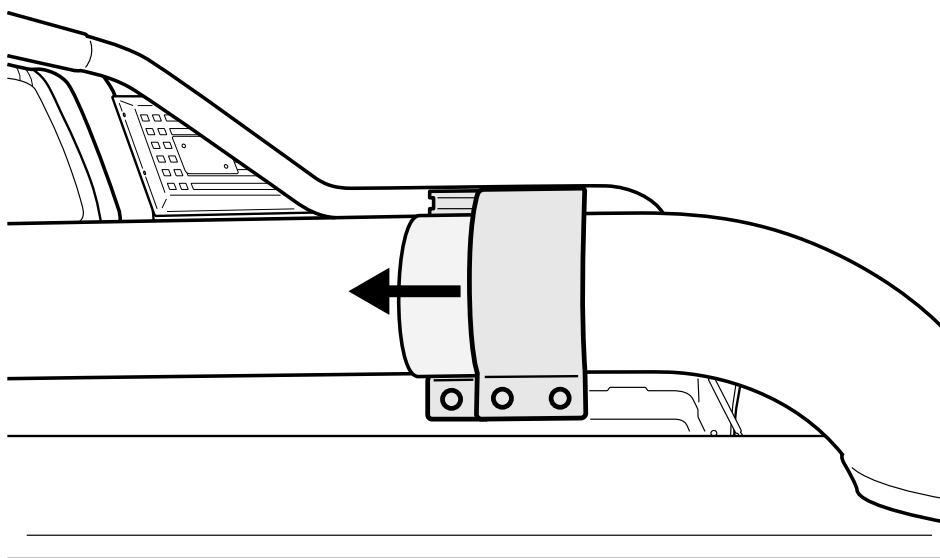


1. Feed the M6 bolt and washer though the holes.
2. Feed the M6 Nut to the bolt as per diagram.

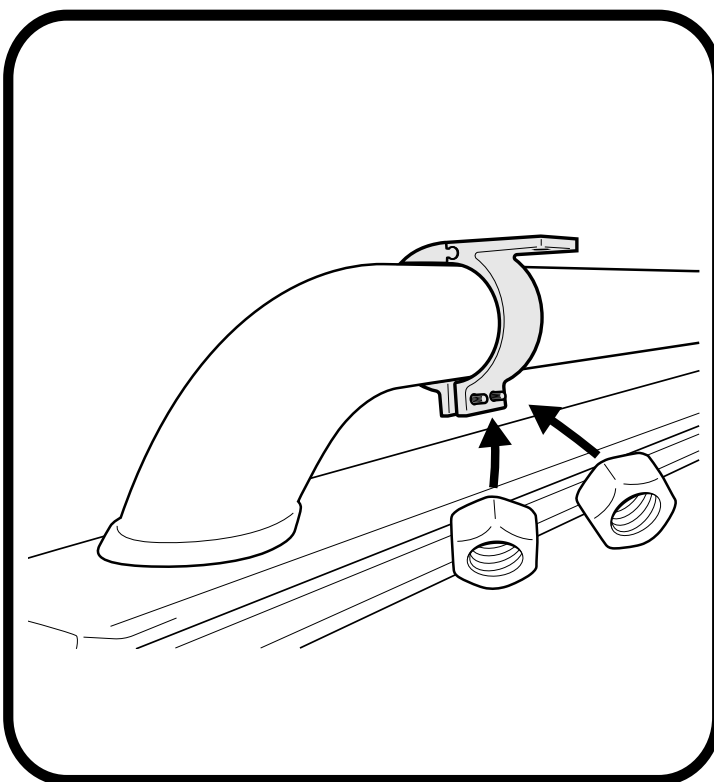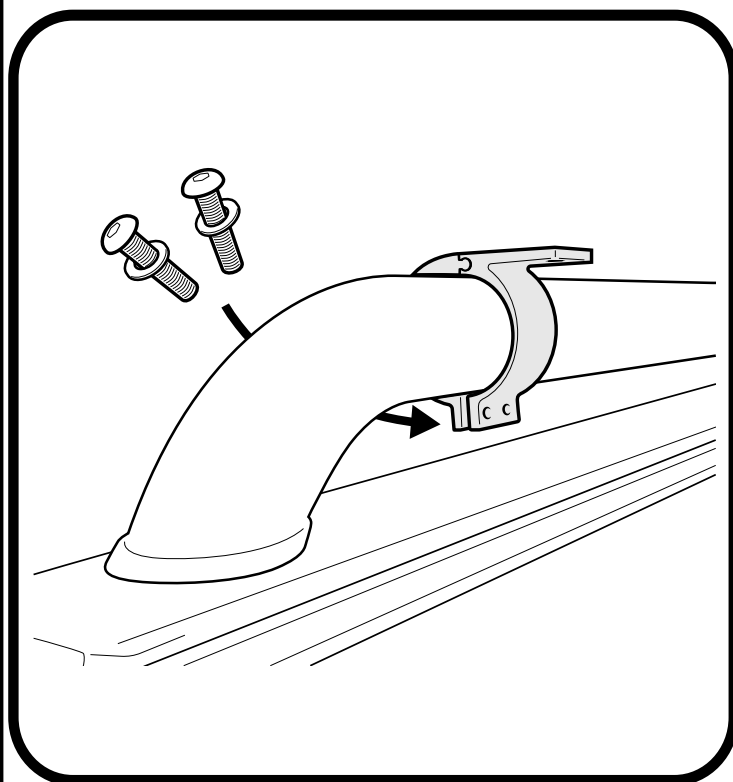


Repeat on all 4 points.


Fasten the nut and bolts.
Repeat on all 4 points.

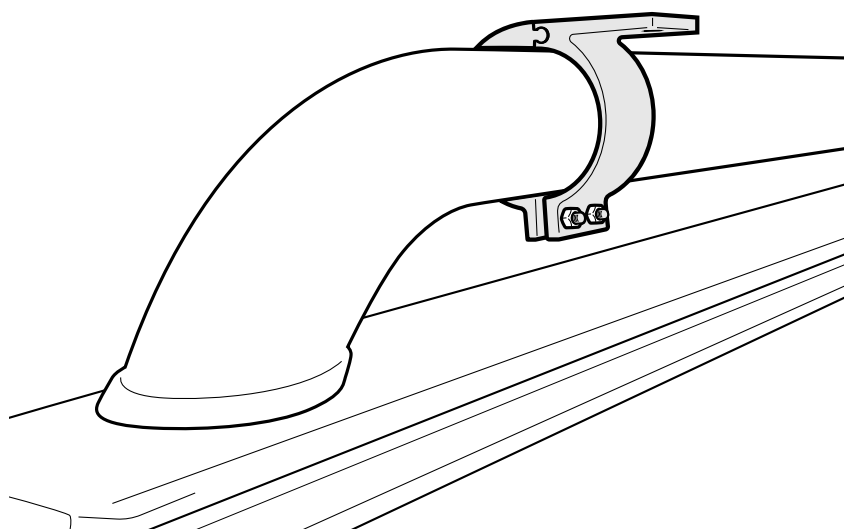


Align the bottom of your cross bar on top of clamp as per diagram.
Repeat on all 4 points.

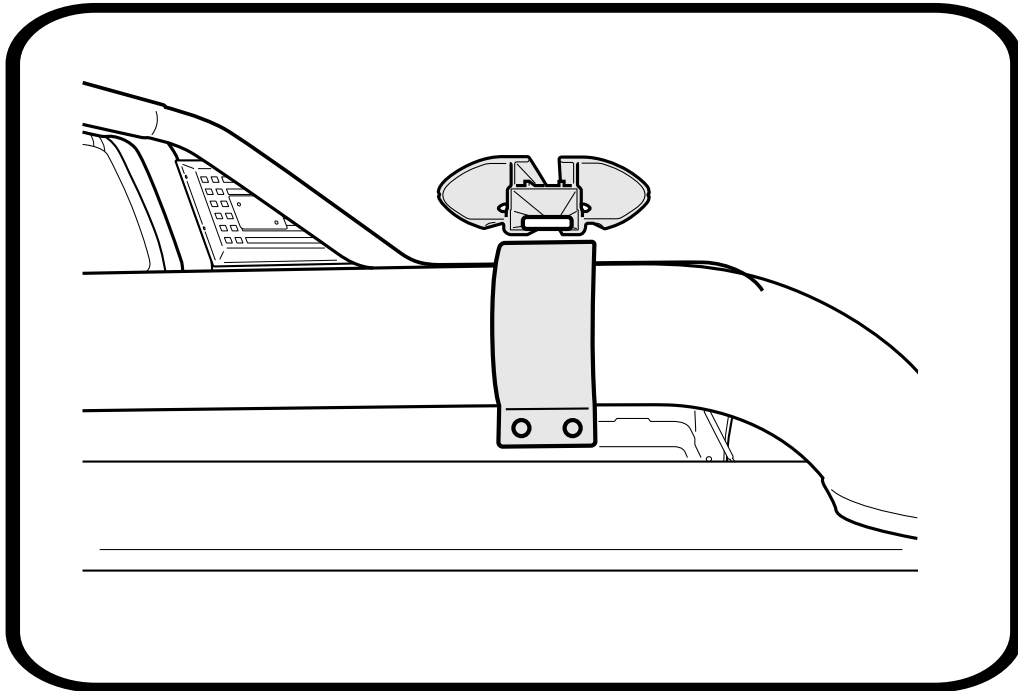

Feed the channel nut into the cross bar cavity.
Repeat on all 4 points.


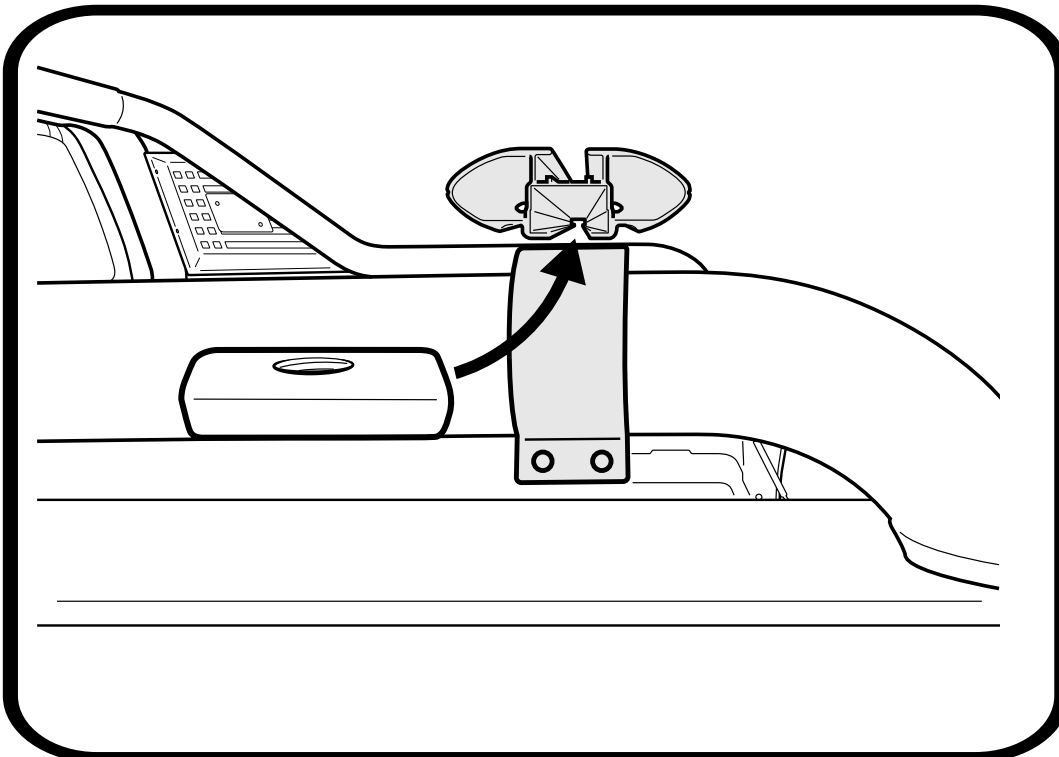


Feed the M6 bolt, spring washer and large M6 washer through the clamp hole as per diagram.
Repeat on all 4 points.

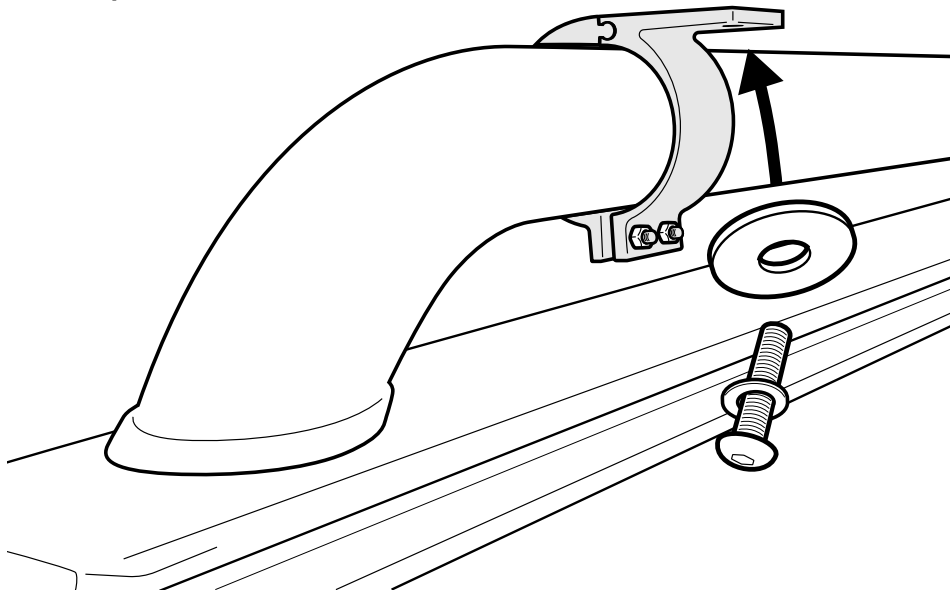

Centre the cross bars.

Now fasten the bolt to the channel nut in the cross bars.

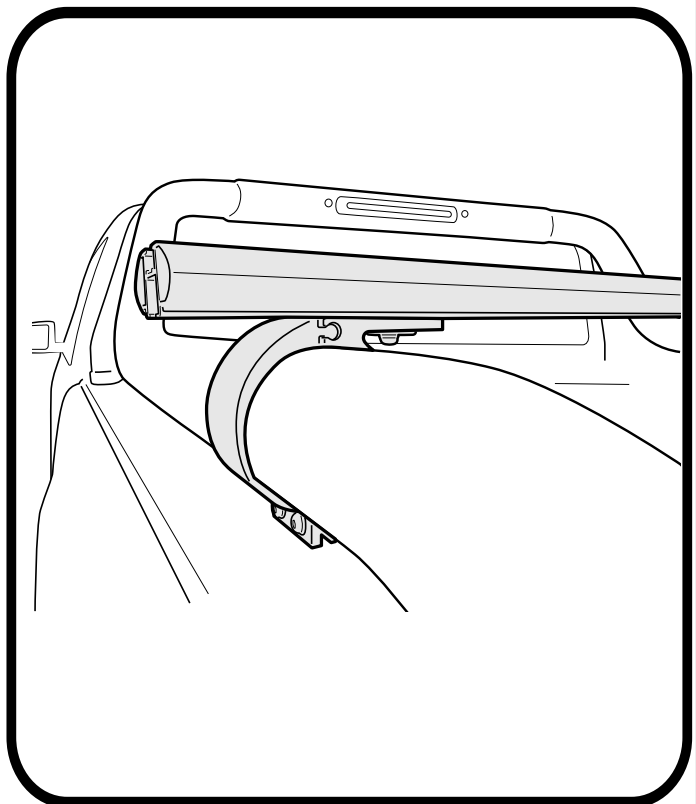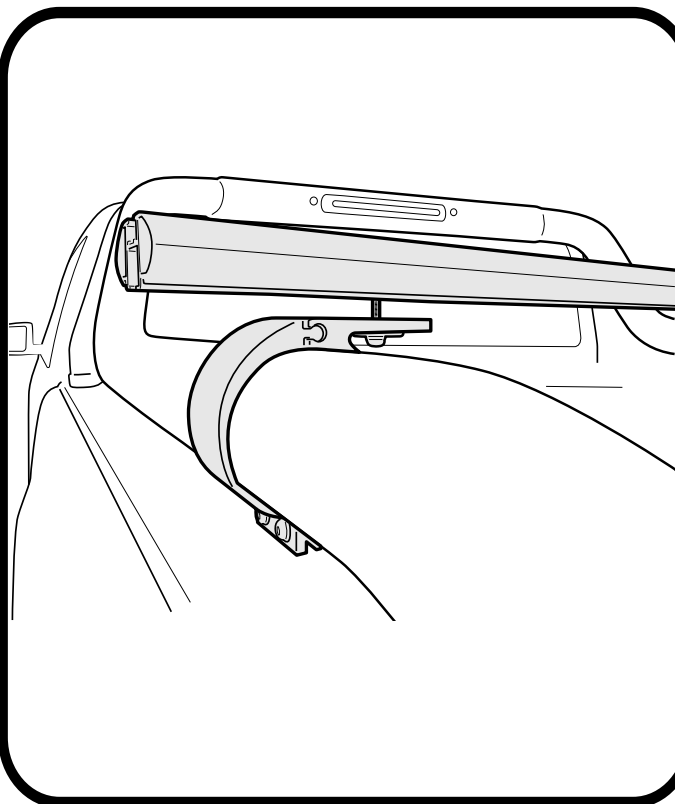

Follow your cross bar manufacturers instructions to complete the cross bar assembly.

