

TAILGATE CENTRAL LOCKING KIT FOR TOYOTA HILUX REVO





2015+ (WITH KEY HOLE)

Installation Instruction

CAUTION:



1. The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
2. Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.

PART LIST:

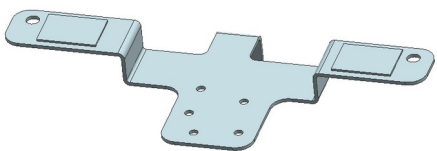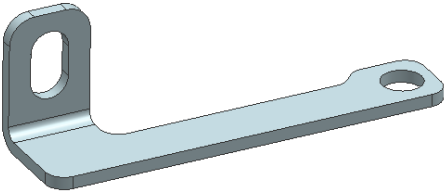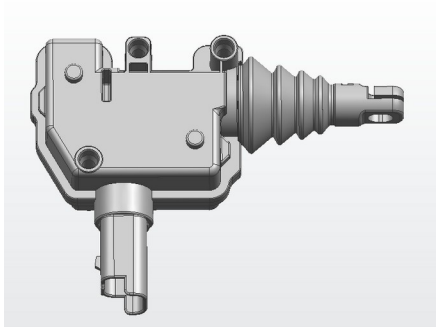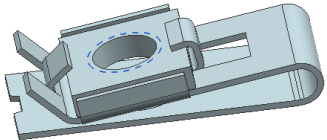NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Bracket 1	②	1	 Bracket 2
③	1	 Actuator	④	1	 Wire harness (Universal)
⑤	1	 Wire harness (connect to driving cab)	⑥	2	 Clip Nut M6
⑦	1	 Hex flange nut M6	⑧	2	 Inner hexagon bolt M6_25


Item NO.: PW046077

Name: E-Tailgate lock for Toyota Hilux Revo (with key hole) 2015+

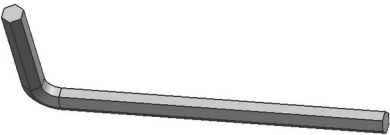⑨	3	 Phillip tapping screw ST4.8_16	⑩	1	 Allen Wrench S=4
⑪	1	 Hexagon Socket Button Head Screws M6_20			

STEP ONE: Brackets Installation:


Remove the steel cover plate on tailgate by loosening the screws. Also remove the two plastic nuts, as below picture shows.

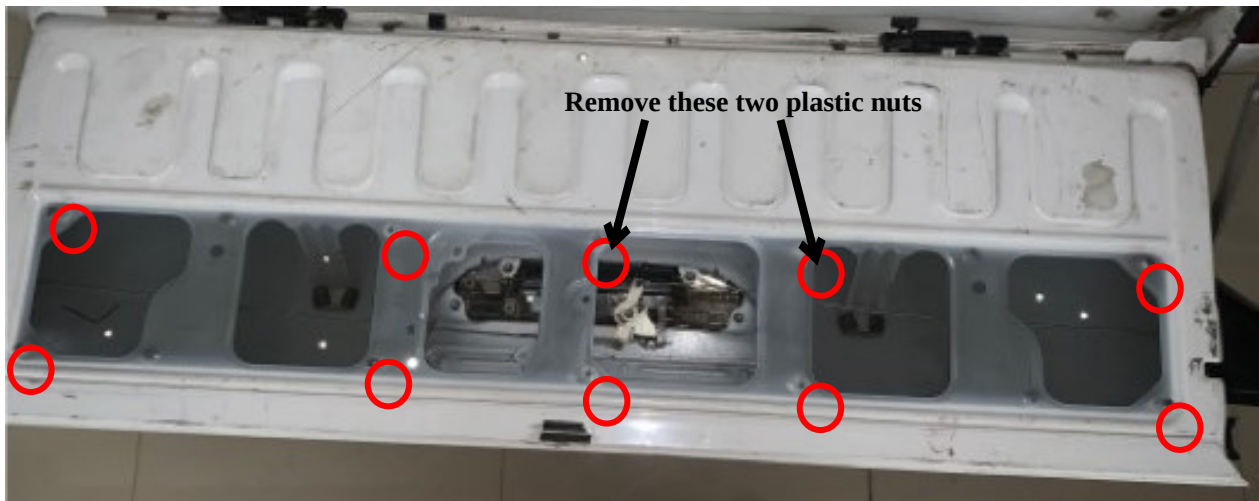


Installation Fig.

Item NO.: PW046077

Name: E-Tailgate lock for Toyota Hilux Revo (with key hole) 2015+

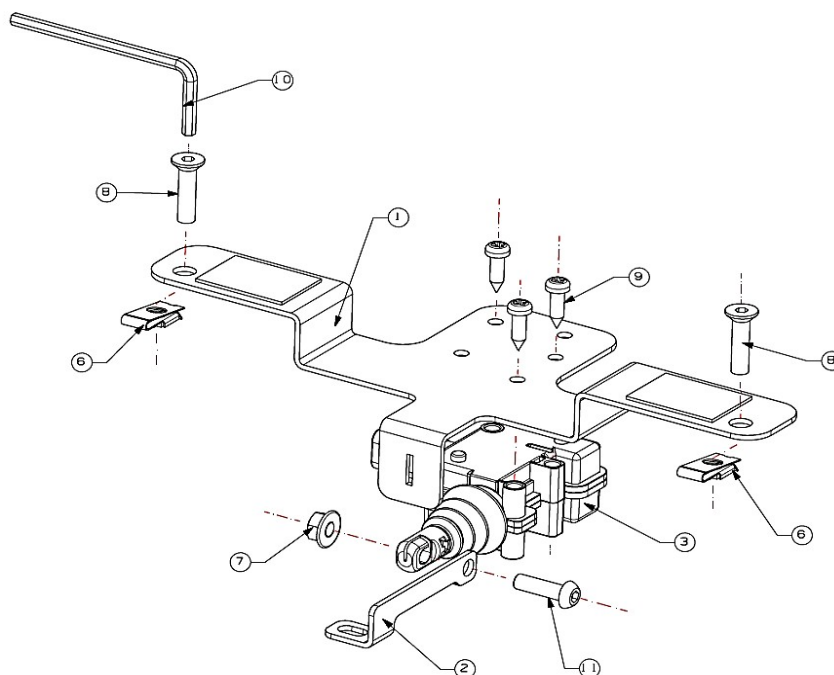


As below photo shows, install ①bracket 1, ②bracket 2 and ③actuator with ⑨⑦⑪.

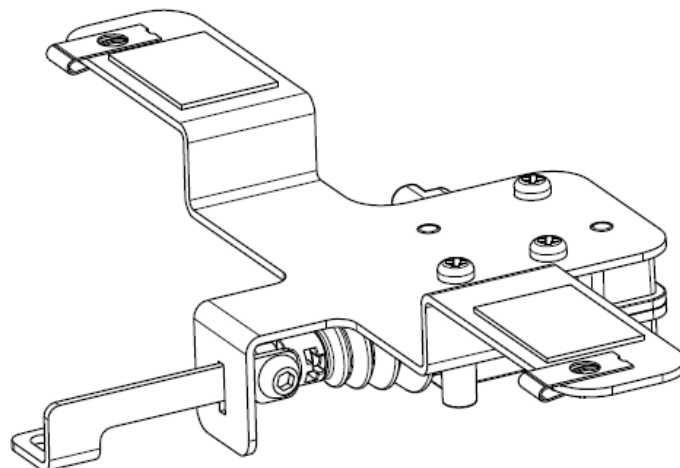


Then stick the bracket assembly inside of the tailgate, fasten it with ⑥⑦⑧.

Notice: As below picture shows, bracket 2 should hold the OE lock bar before fasten the bracket assembly.

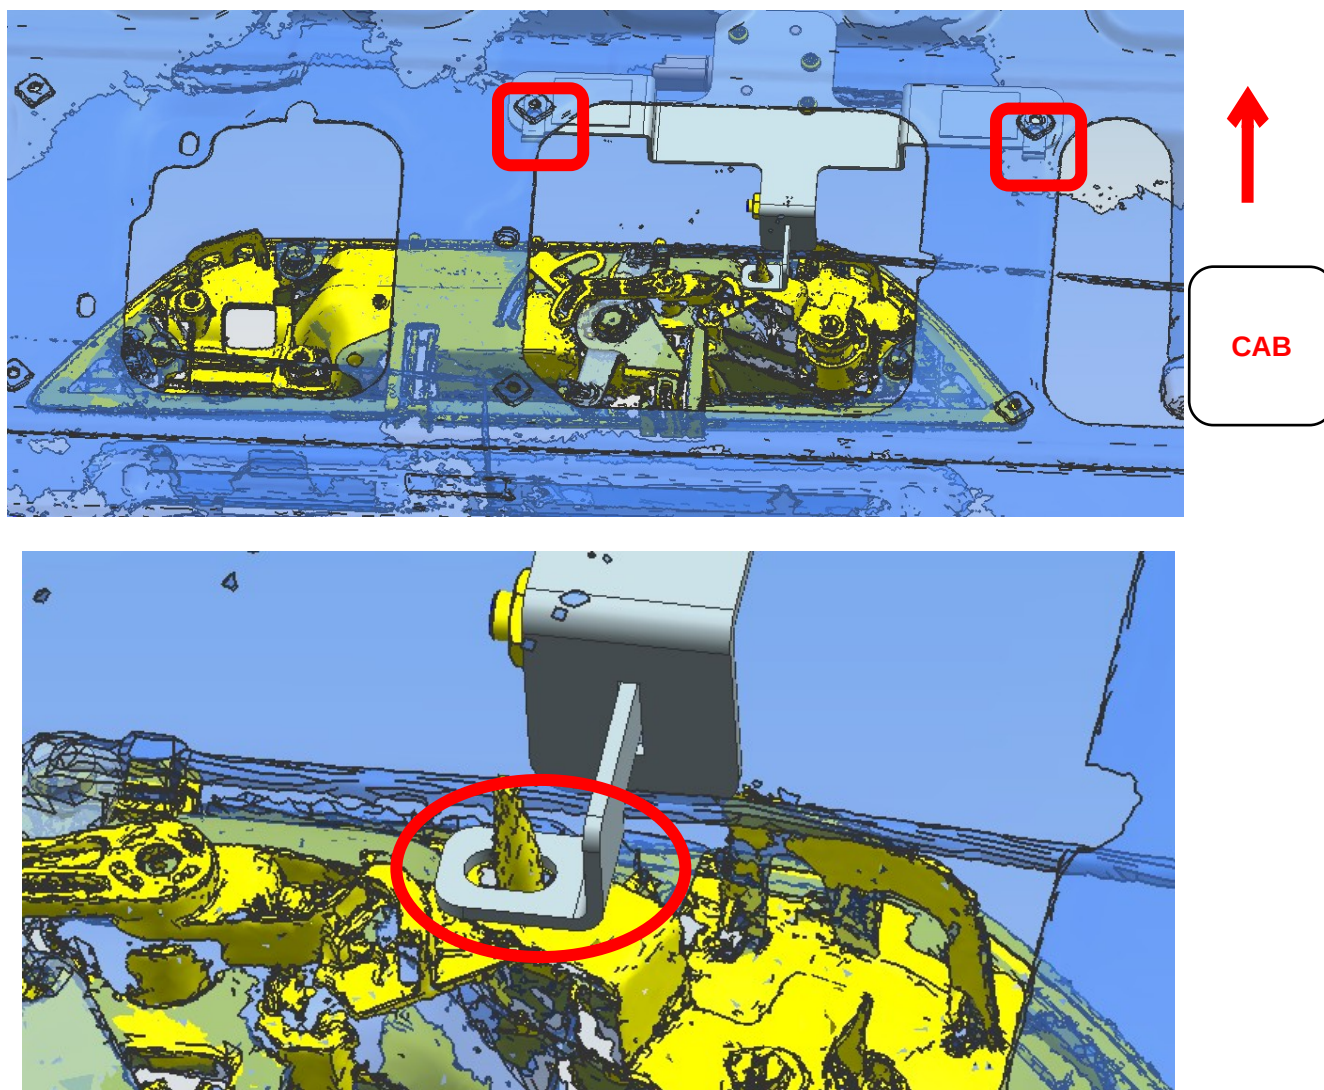


- Wiring harness connection:


1. Connect the wiring to the actuator the route the ④ wiring harness out of the tailgate and underneath the vehicle.

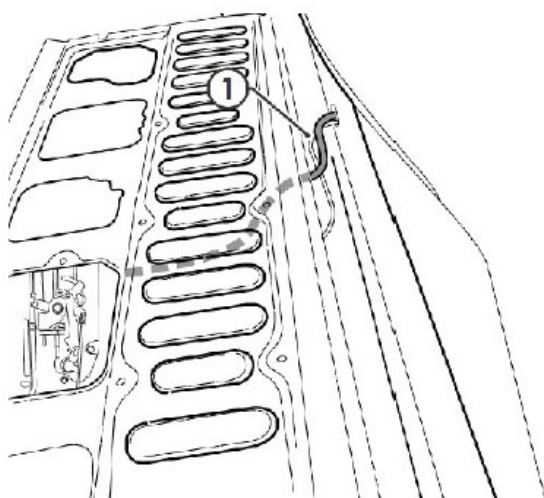


2. Route the wiring harness along the chassis rail to the driver seat.

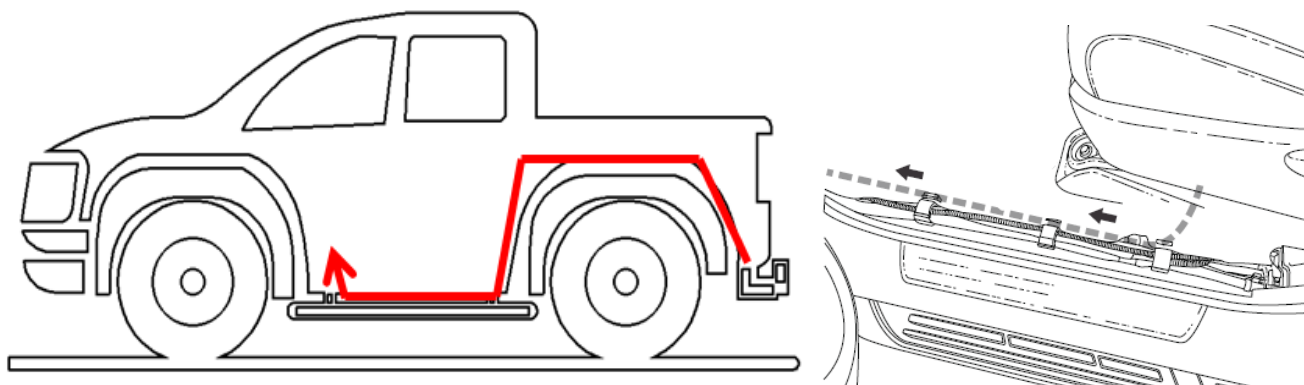


3. Locate and disconnect the connector in the driver side kick panel area.

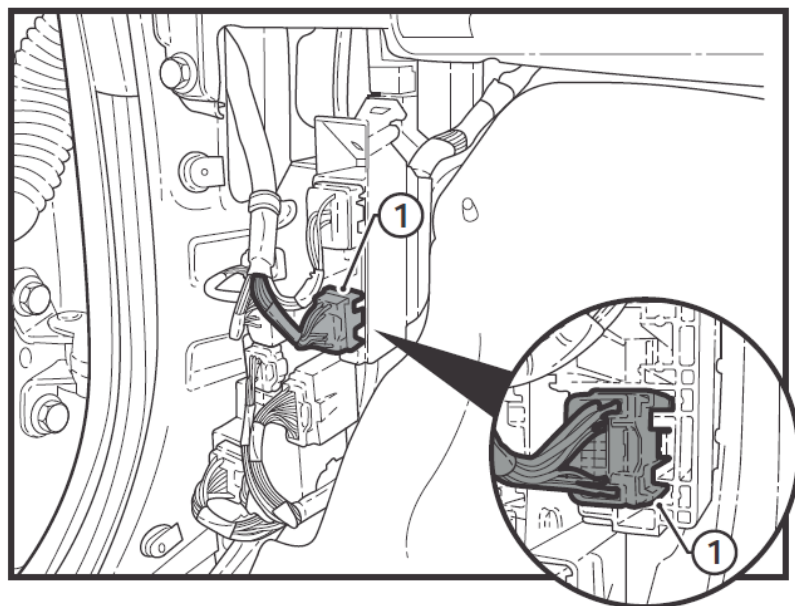

1. As above picture shows, connect the OE wiring with ⑤ (the wire harness we supplied).

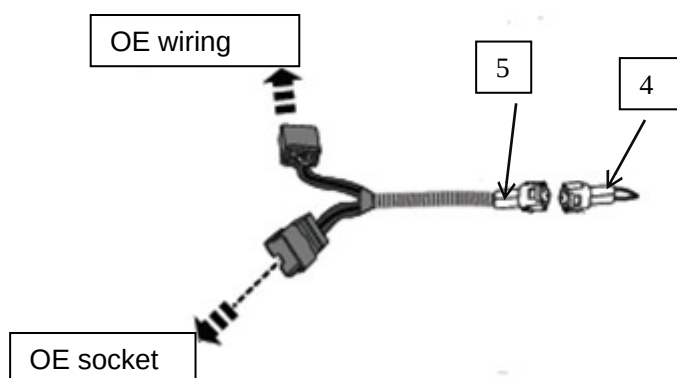

2. Test the tailgate lock function with the remote control. Then secure the wires with cable tie under the chassis, reinstall the fender flare and tailgate cover.

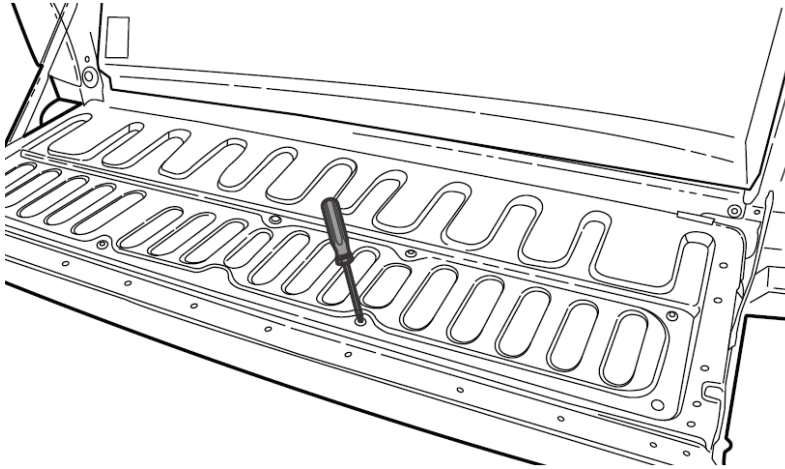

Fitting complete.