

GENERAL FIBREGLASS CANOPY REFERENCE

Supplier's original Karuna / FORCE PRO general installation pages are reproduced after this notice.

IMPORTANT — NOT A VEHICLE-SPECIFIC FITTING OR WIRING GUIDE

Purpose

This PDF is provided as general background for canopy installation and component identification while an up-to-date, model-specific manual is being obtained. The drawings in the original pages show older vehicle generations and generic electrical layouts.

Products receiving this interim reference

GWM Cannon 2020–2026; RAM 1500 DT 2020–2026; Toyota Hilux 2015–2025; Mitsubishi Triton MV 2024+; and Nissan Navara D27 2026+.

Critical limitations

Do not assume the illustrated brackets, clamp positions, mounting points, wiring colours, connector positions, wiring routes or electrical functions match your vehicle and canopy. Even where a vehicle name resembles a listed example, model generations and supplied harnesses can differ.

Before installation

Have a suitably qualified installer confirm the correct vehicle fitment, supplied hardware, factory wiring and manufacturer's current installation requirements. Do not connect electrical systems by matching example wire colours alone. If any detail is uncertain, stop and request the correct model-specific instructions.

Original document

The following four pages are the supplier's original general Karuna installation material, retained for reference. This cover is a UniUte clarification, not a revision or certification of the original instructions.


INSTALLATION INSTRUCTIONS



NP300/ALASKAN 2016+






RANGER 2012+ & 2016+

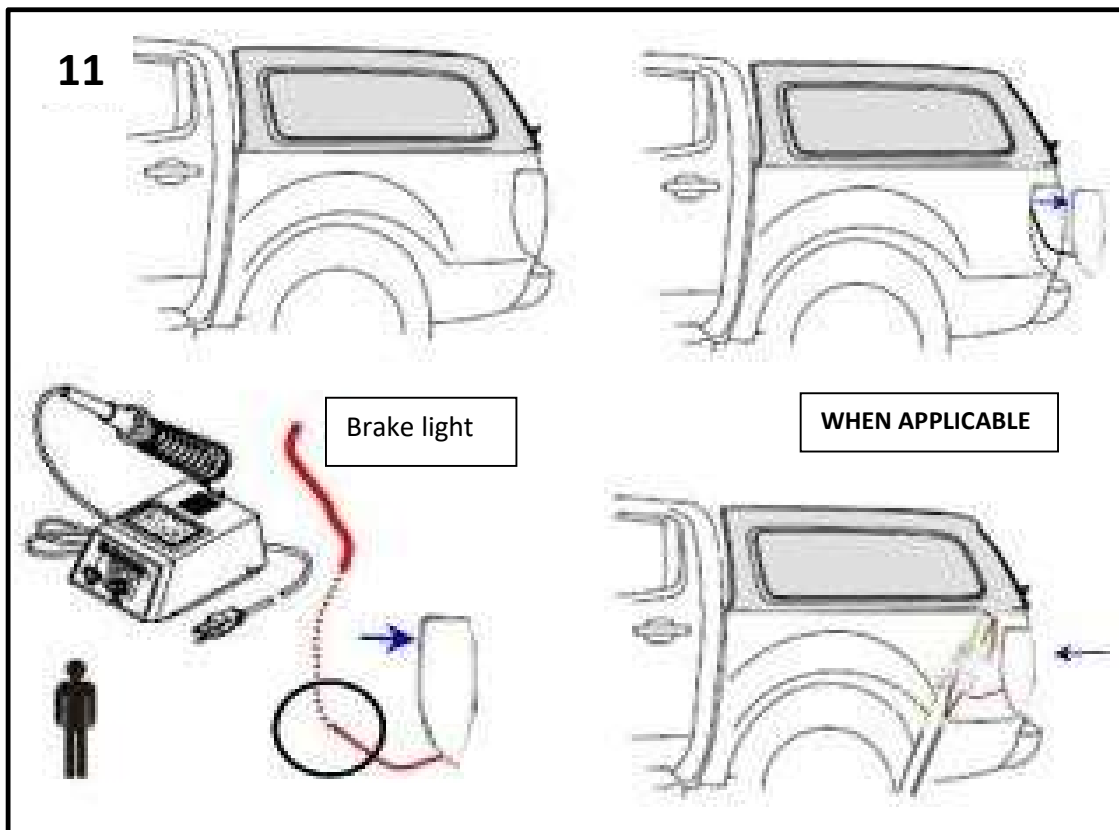

The installation of a canopy does not guarantee 100% water proof of a pick up truck bed/tub. Although we take every possible measure to prevent water and dust from entering the cargo area, we cannot be held accountable for holes and gaps in your factory bed/tub.



INSTALLATION INSTRUCTIONS

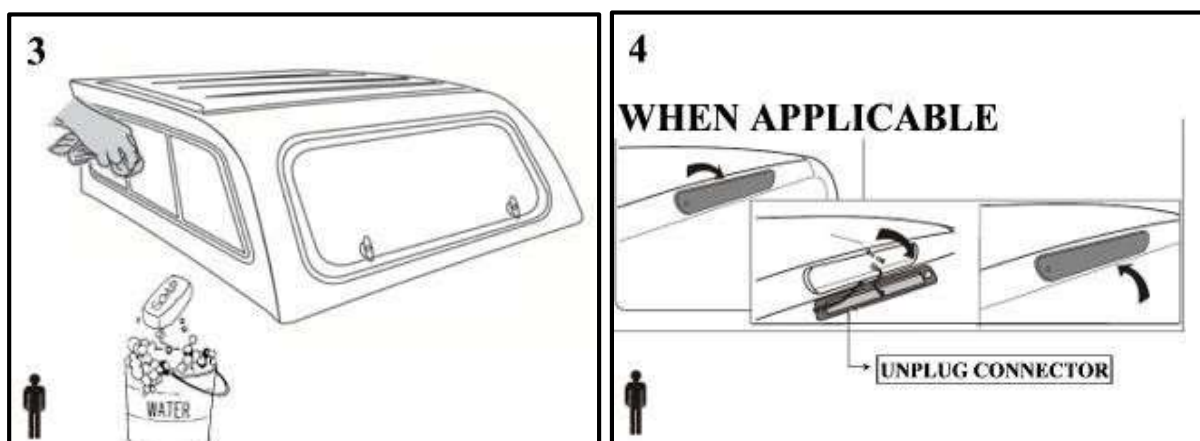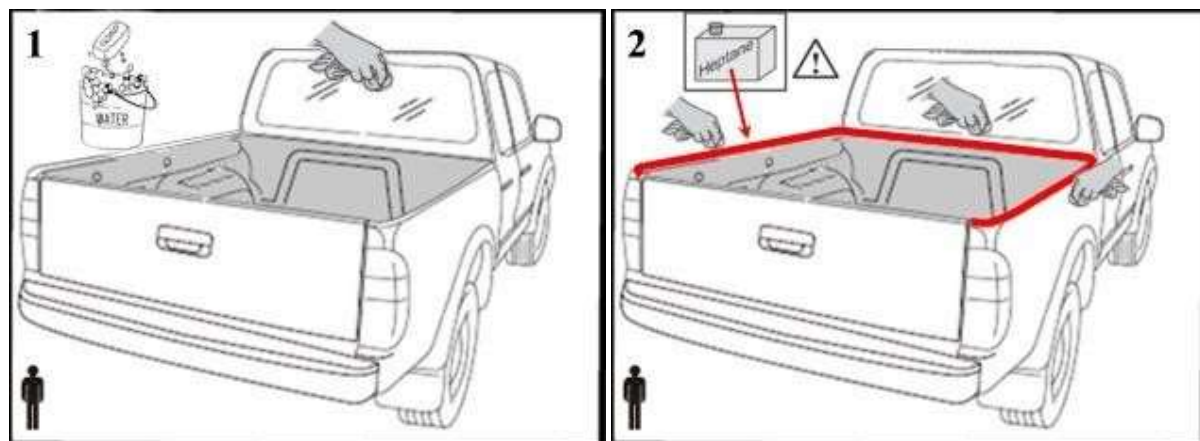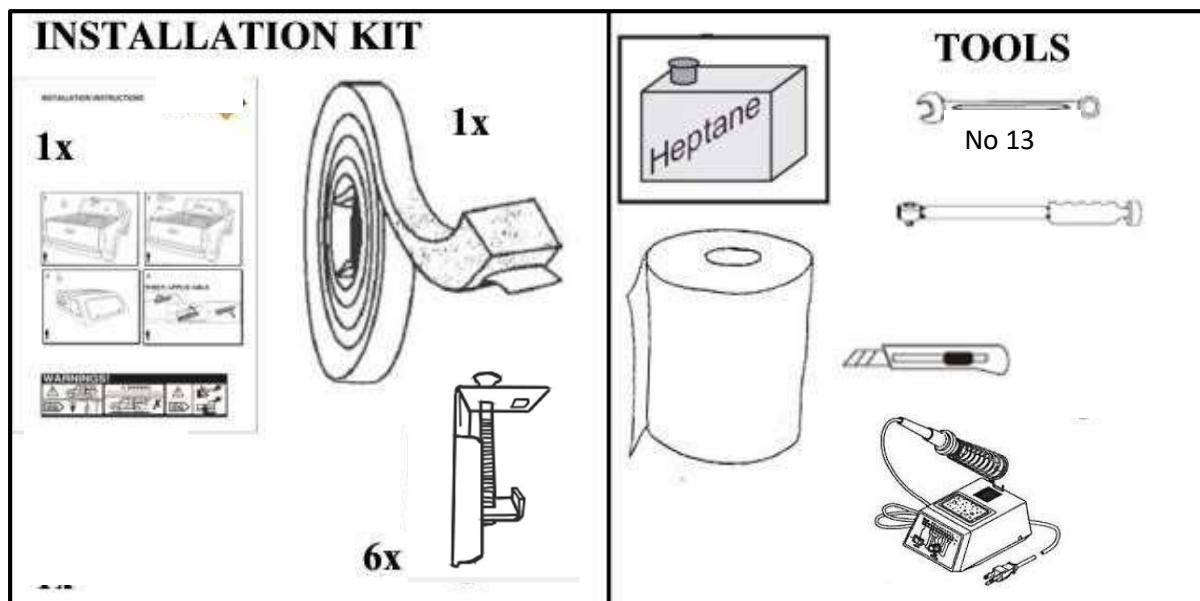

Your authorised dealer:

The installation of a canopy does not guarantee 100% water proof of a pick up truck bed/tub. Although we take every possible measure to prevent water and dust from entering the cargo area, we cannot be held accountable for holes and gaps in your factory bed/tub.

INSTALLATION INSTRUCTIONS

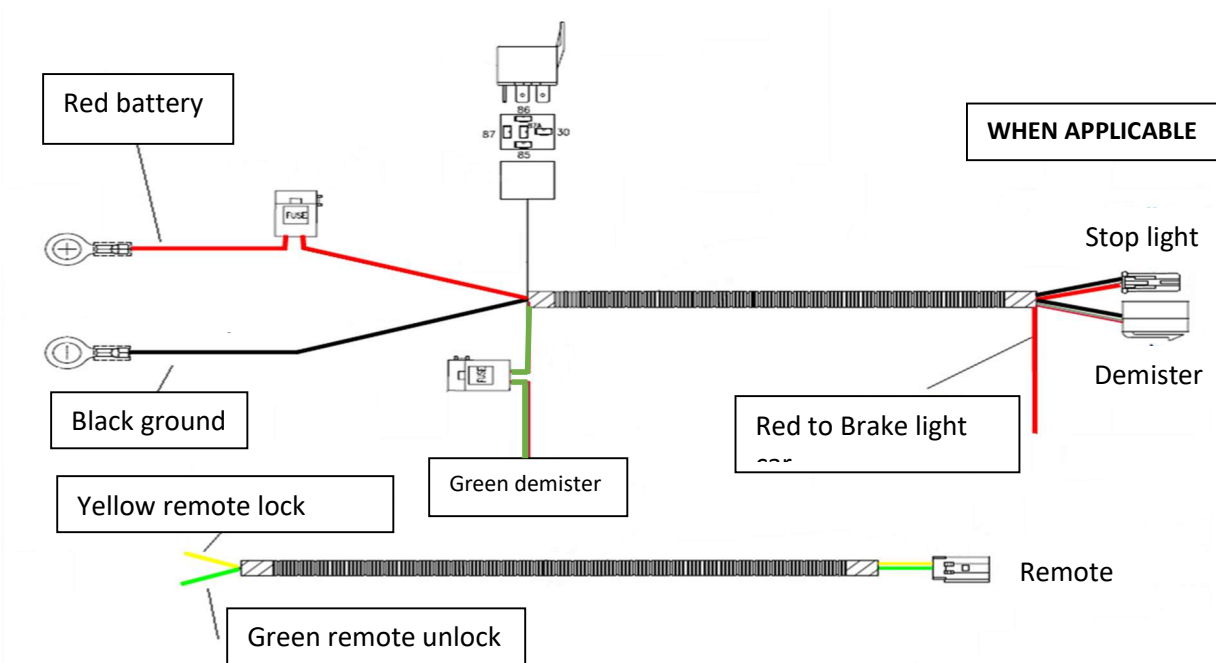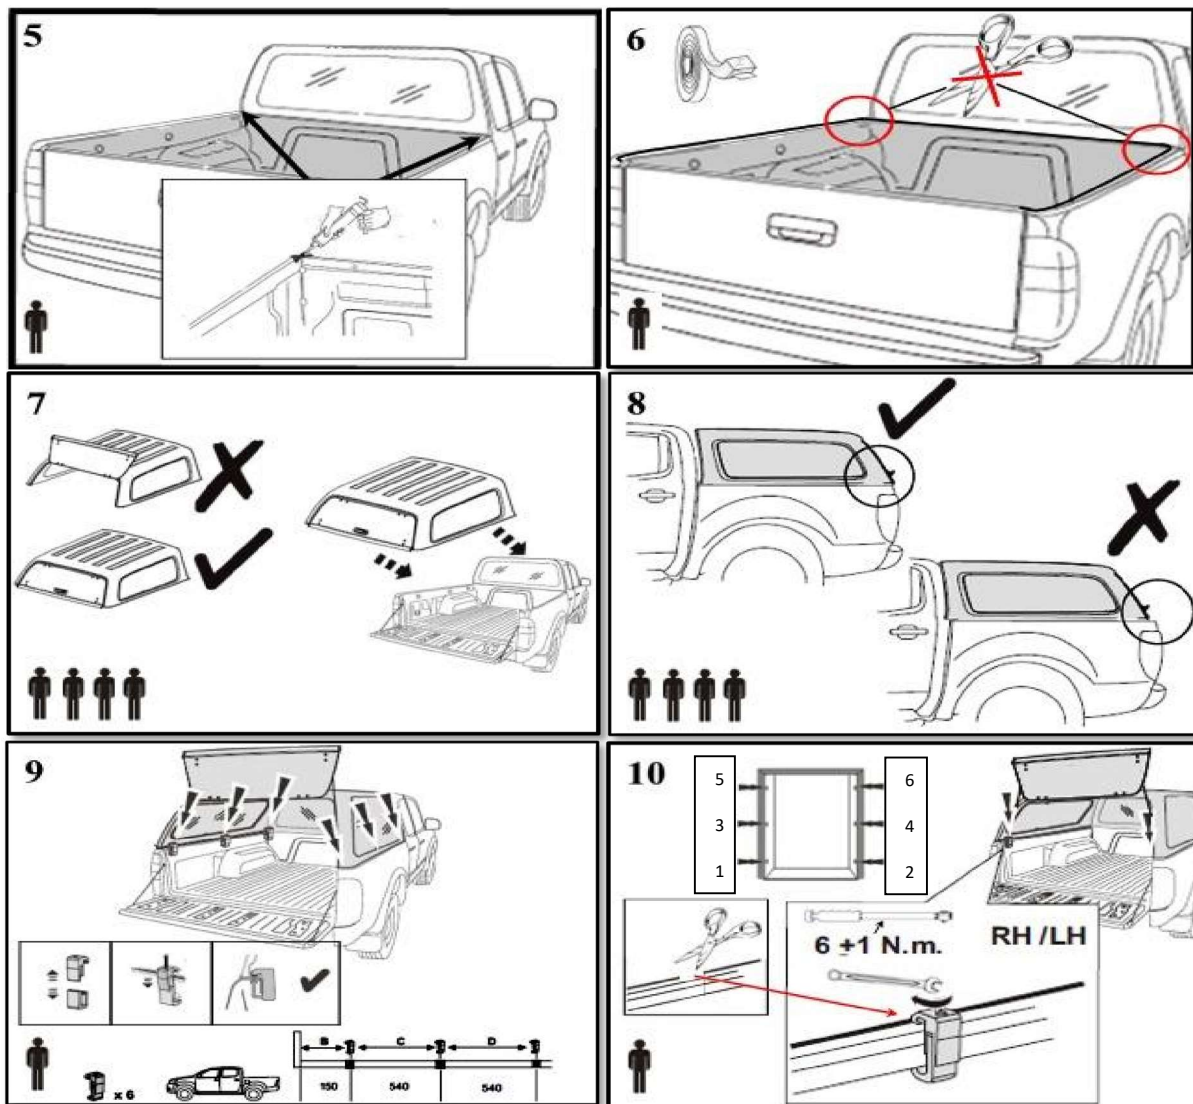


The installation of a canopy does not guarantee 100% water proof of a pick up truck bed/tub. Although we take every possible measure to prevent water and dust from entering the cargo area, we cannot be held accountable for holes and gaps in your factory bed/tub.

INSTALLATION INSTRUCTIONS



AMAROK

WHEN APPLICABLE

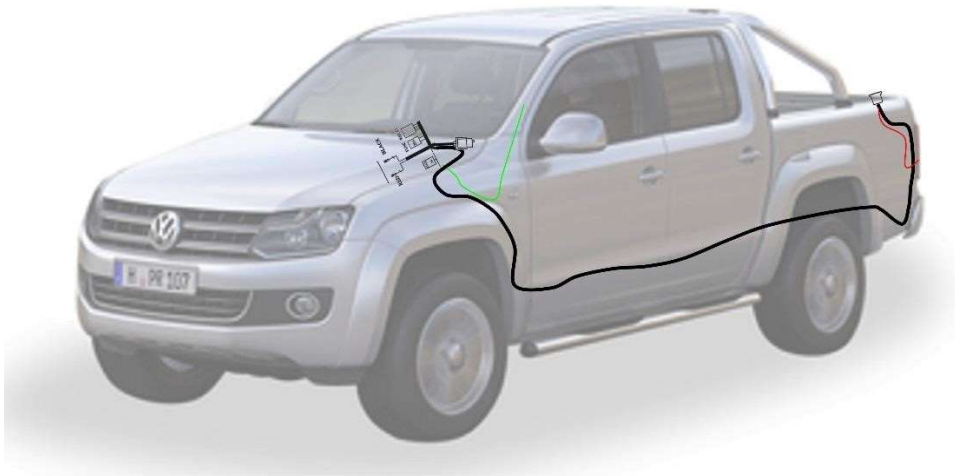

HILUX 2016+



L200/FULLBACK 2016+



The installation of a canopy does not guarantee 100% water proof of a pick up truck bed/tub. Although we take every possible measure to prevent water and dust from entering the cargo area, we cannot be held accountable for holes and gaps in your factory bed/tub.