

INSTALLATION INSTRUCTIONS

PART#PW028302

LADDER RACK FOR ROLLER LID FOR FORD RANGER 12-16/ HILUX REVO 15-17/ NISSAN NAVARA 14-17/ ISUZU D-MAX 16-14

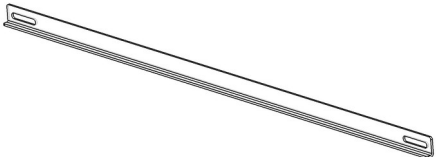
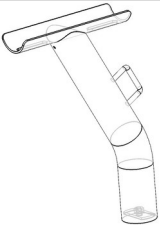
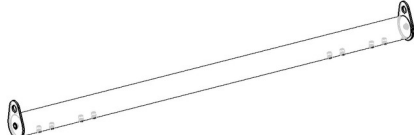
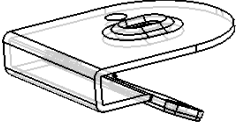

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

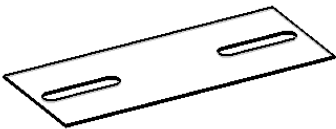
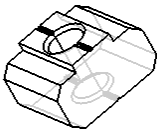

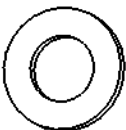


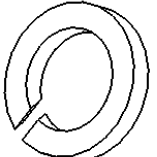



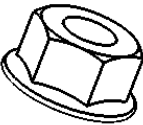

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

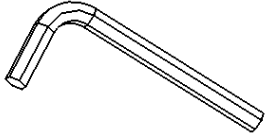
Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
	2	 Connecting plate		4	 Legs
	2	 Extending Bar		4	 Bracket
	4			2	

INSTALLATION INSTRUCTIONS

		Rubber cover			Foam plate 3
4			8		
		Foam plate 4			M6 Silver Block
4			4		
		Hexagon screws M12_40			Spring Washer D12
4			4		
		Flat washer D12			Hexagon Bolt M10_30
4			12		
8					Spring Washer D10
		Hexagon Bolt M10_25			
8			4		
		Flat washer D10			Big plate Washer D10
4			8		
		Hexagon nuts with flange M10			Hexagon screws M6_15
8			8		
		Spring Washer D6			Flat Washer D6

INSTALLATION INSTRUCTIONS

1		1	
	Inner hexagon spanner S=8		Inner hexagon spanner S=4

InstallationSte

Installation Fig.

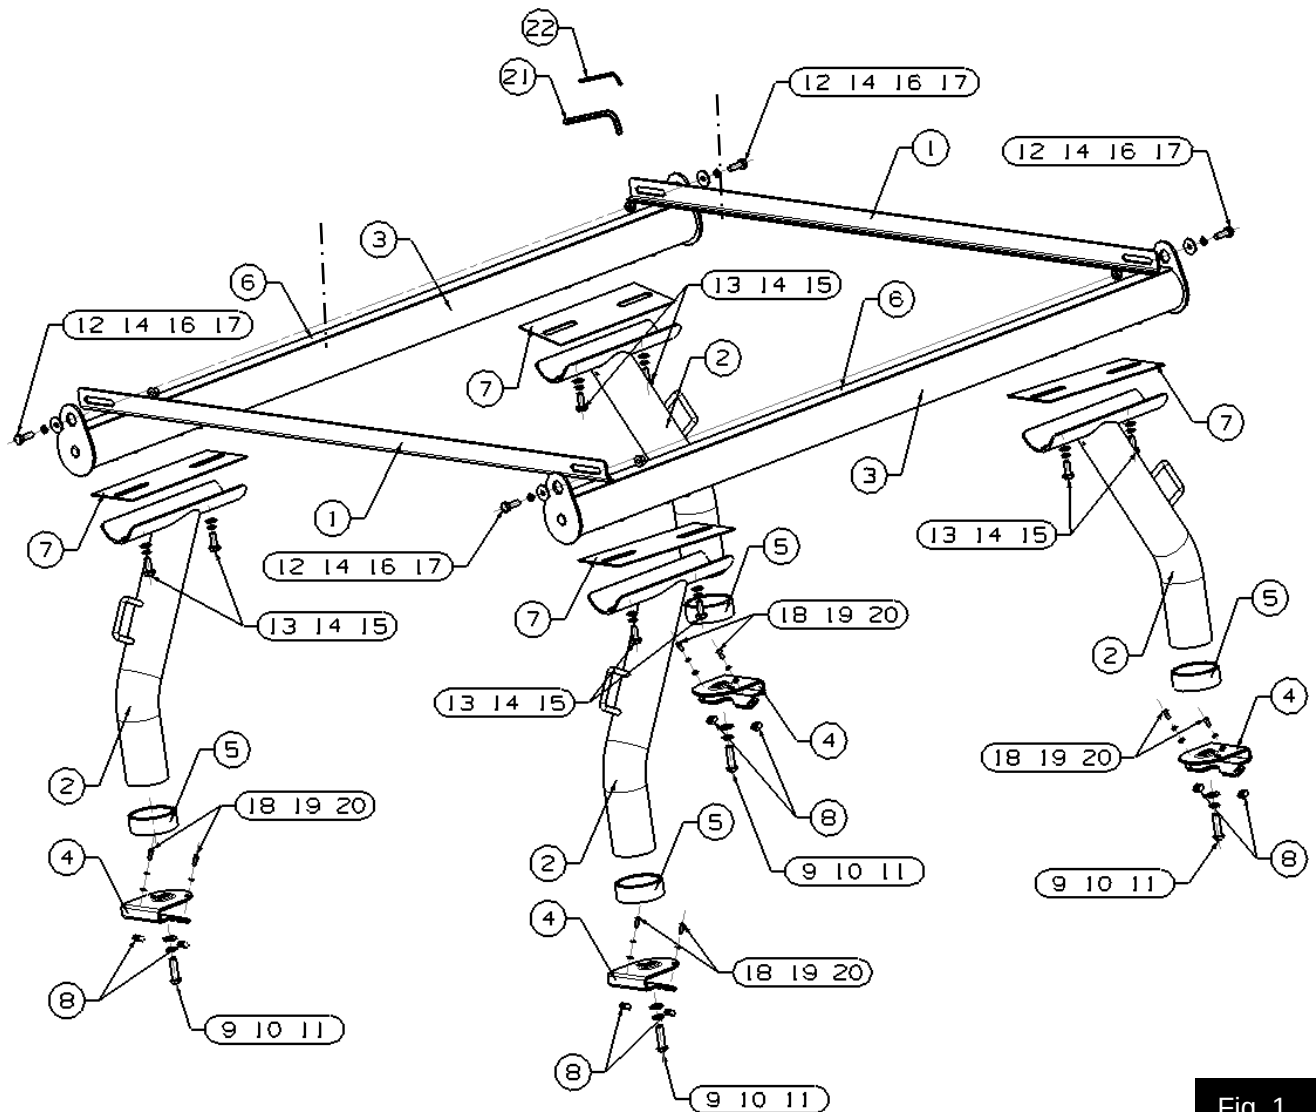


Fig. 1

Step 1: Verify that all parts are present according to the manual and illustration.

Step 2: As shown in Fig.2. Put the foam plate 4 on the installation position of Legs , cover the pipe orifice with rubber cover and install the bracket by standard component, do not tighten the screws.

Step 3: As shown in Fig.3. Put foam plate 3 on the extending bar, assembled the connecting plate with component . Do not tighten the screws.

INSTALLATION INSTRUCTIONS

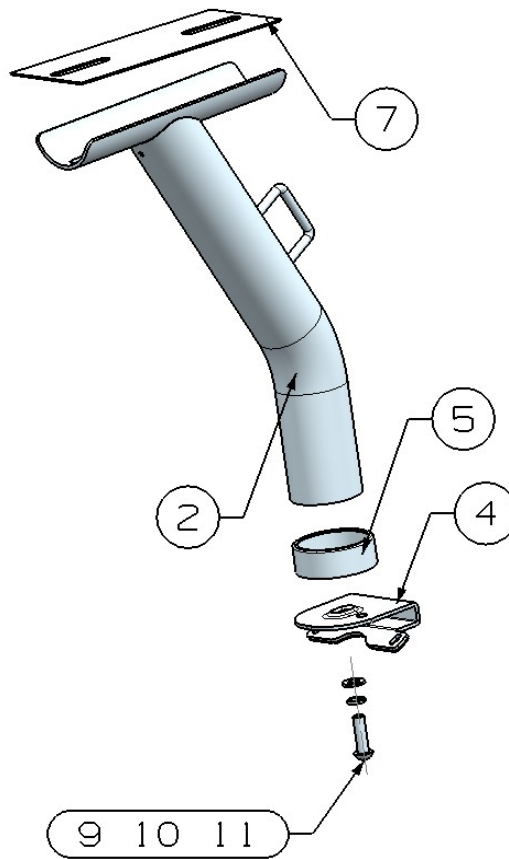


Fig. 2

There are 4 assembled points on the rack as shown on the right.

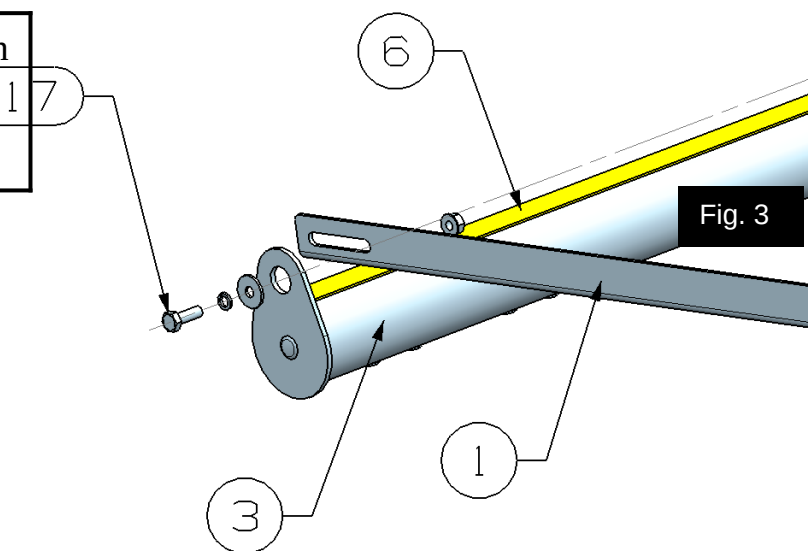


Fig. 3

INSTALLATION INSTRUCTIONS

Step 4: assemble & by, without tighten the hardwares as Fig. 4 show.

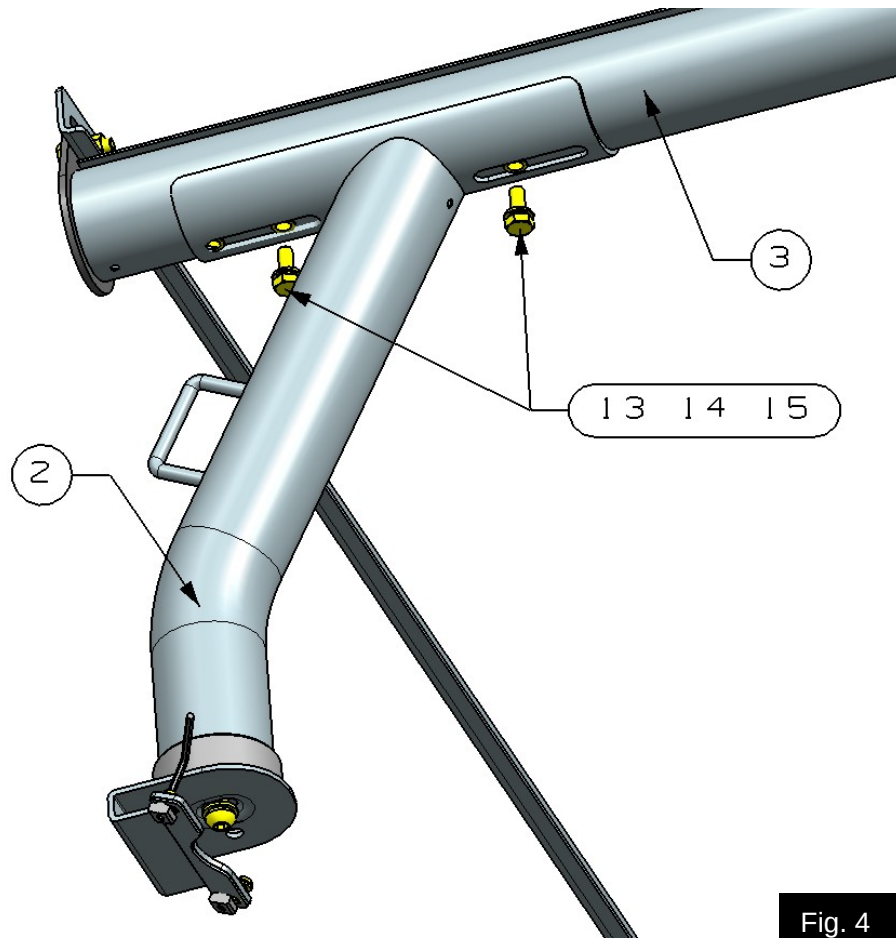
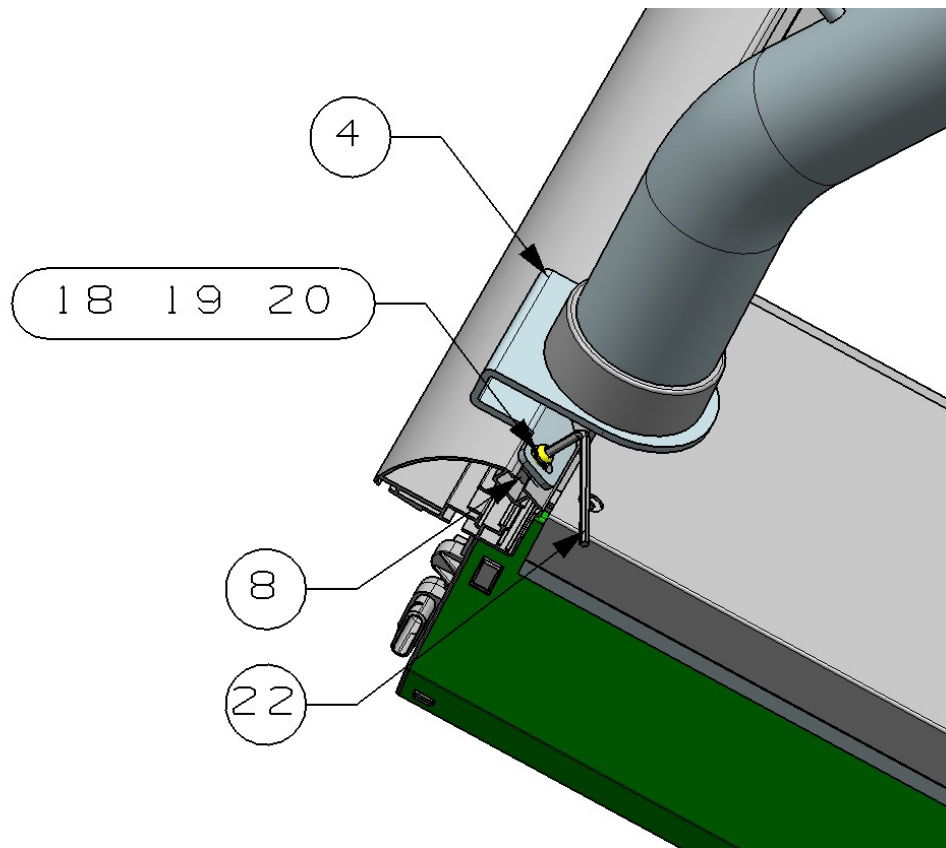


Fig. 4

Step 5: put the M6 Silver Block into the groove of the side rail, 4 pcs each side, assemble & by as below pictures show, left and right are symmetric.

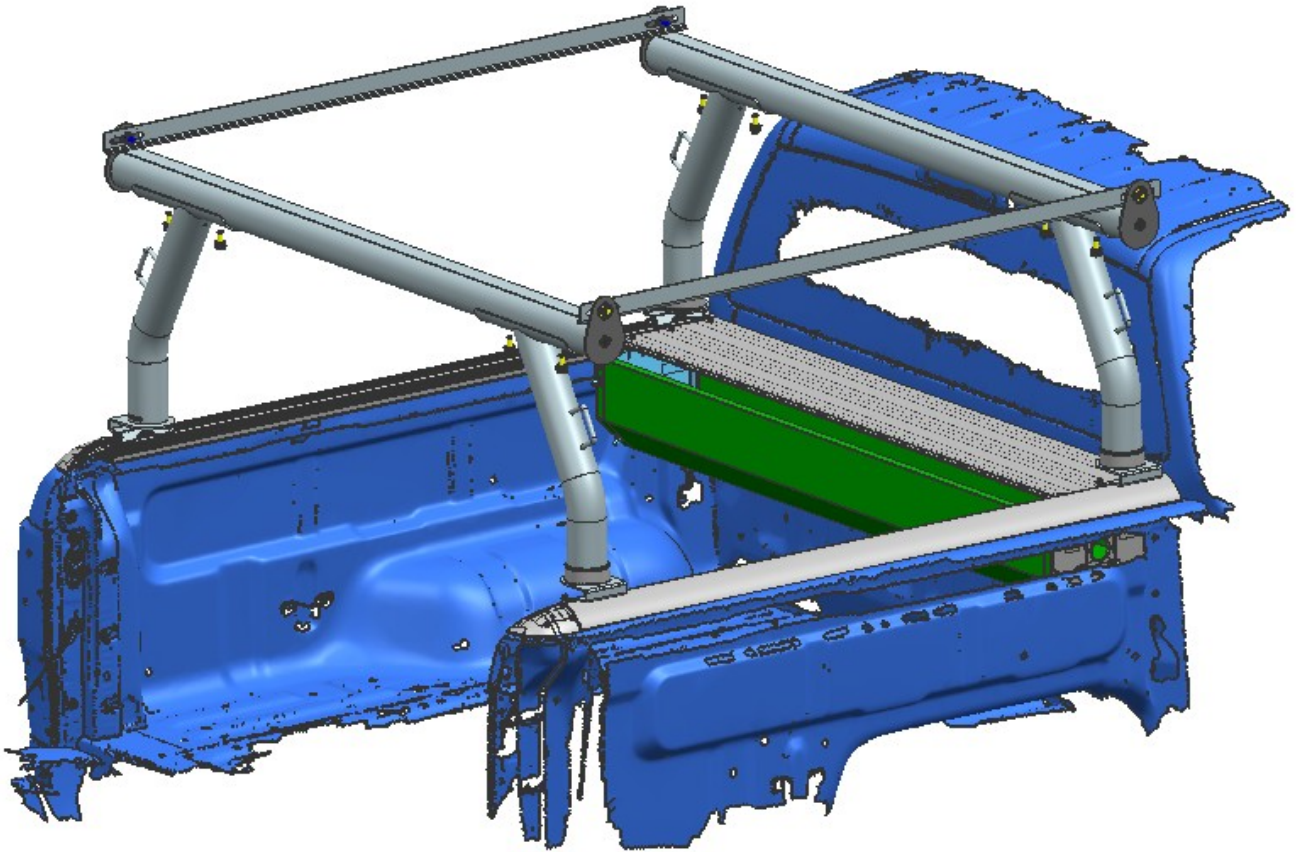
INSTALLATION INSTRUCTIONS



Step 6: adjust the position and tighten all the hardware.

Step 7: clean up the tooling and complete the installation

INSTALLATION INSTRUCTIONS



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.