

SOFT TRI-FOLD TONNEAU COVER


Universal fitting instructions | For soft tri-fold tonneau cover products. Follow any vehicle-specific bracket requirements in addition to these steps.

Before installation

Read all steps before starting. Inspect the cover and verify that all supplied parts are present. Do not force clamps onto plastic rail caps or unsuitable mounting surfaces. Confirm vehicle fitment before installation.


STEP 1 — Position and align

Remove the folded cover from its box. Position it on the tub with the retaining straps toward the rear window. Inspect the cover. Install the bulkhead seal flat along the outer edge of the cab-side rail (do not allow it to curl), then square the cover evenly to the tub rails and front wall.

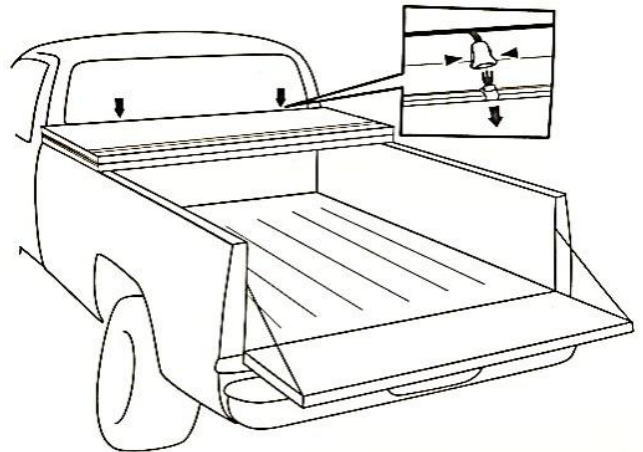


STEP 2 — Secure front clamps

Lower both front clamps. Adjust each clamp and seat the jaw securely beneath a metal bed-rail lip or approved vehicle-specific bracket. Tighten until snug and the Q-seals are compressed. Do not overtighten.

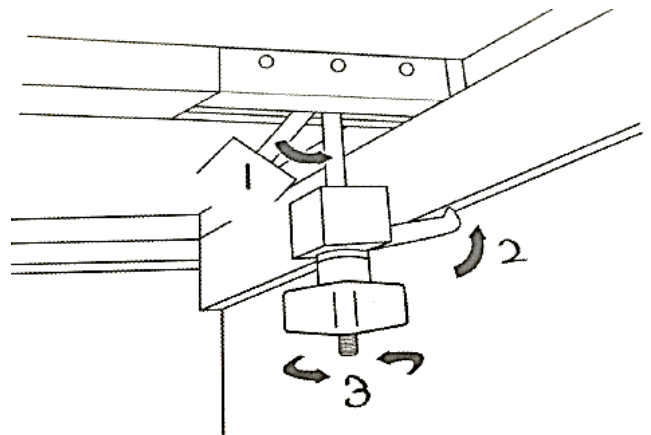

STEP 3 — Unfold the cover


Unfold the panels toward the tailgate, checking that the cover sits evenly on both sides. Differences in tub-rail shape may mean the cover does not extend over every outer edge.

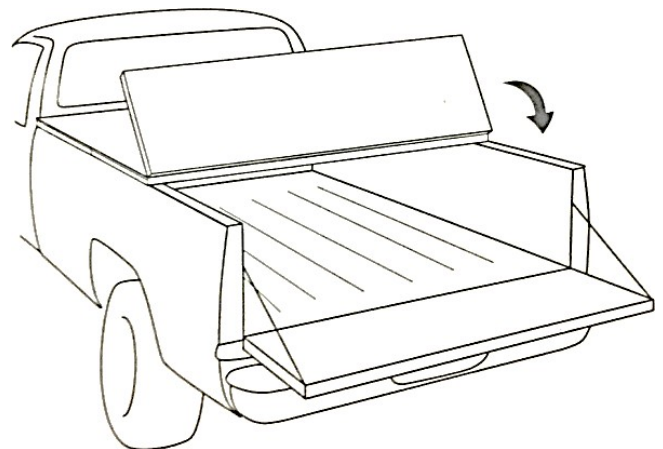

FINAL SECURING & SAFETY

STEP 4 — Secure rear latches

Lower the rear latches. Position each jaw beneath a secure metal bed-rail lip or approved mounting bracket, adjust the clamp height using its threaded handle, and lock the latch vertically until snug with the Q-seals compressed. Confirm all clamps are locked before driving.

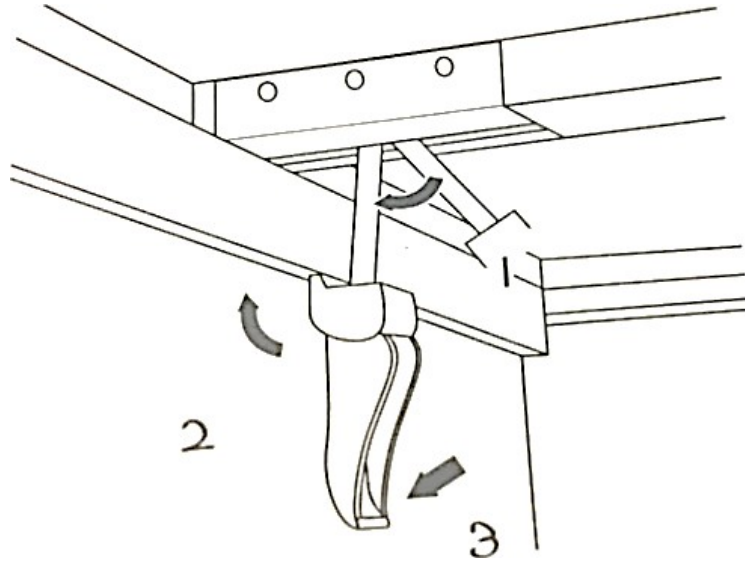

Safety — read before driving

NEVER attach the clamps to the plastic bed-rail cap lip. All clamps must be securely fastened to the metal lip or the approved vehicle-specific mounting brackets before vehicle operation.

Never drive with the cover in the folded-open position unless the safety straps are correctly buckled. Do not overtighten the clamps.

BYD Shark 6 — special rear brackets

The BYD Shark 6 has unusually deep rear tub corners. The supplied rear brackets must first be bolted to the existing factory mounting points to create a secure clamp surface. This requires a T40 Torx bit to remove and refit the existing factory bolts; no drilling or cutting is required for these brackets. The brackets remain fitted to the tub when the assembled cover is removed.

Installation note

This document is based on the manufacturer-supplied universal soft tri-fold instructions. Vehicle-specific supplied hardware takes priority wherever the tub structure does not provide a secure metal clamping lip. If the clamps do not seat securely, do not drive with the cover fitted until the correct mounting arrangement is confirmed.