INSTALLATION INSTRUCTIONS

PART# PW059566

PW059566 — MODULAR CANOPY FOR BYD SHARK 6 2025+

Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.
-

Components


FRONT PART

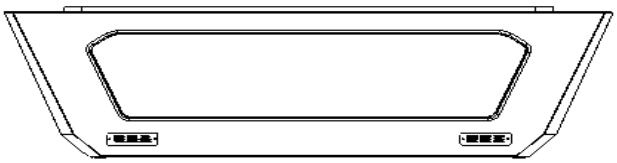


LEFT PART

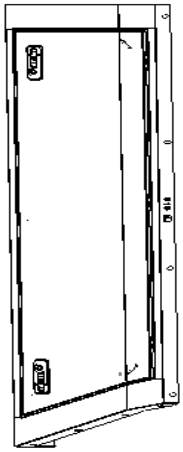


TOP PART

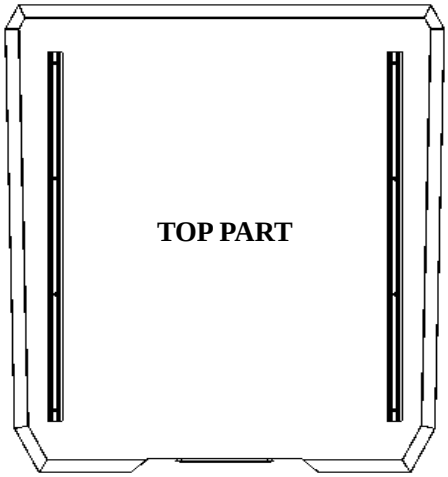

RIGHT PART

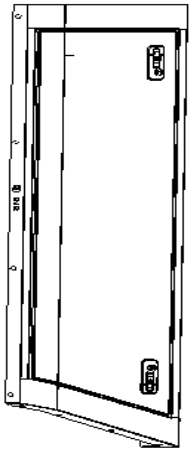

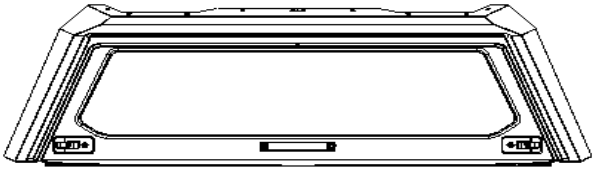


REAR PART

INSTALLATION INSTRUCTIONS

Fitting kit

HEX BOLT GROUP M8_25

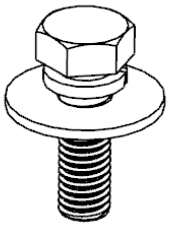


X 36

SEAL RUBBER



X 1

FRONT FOAM TAPE



X 1

Tools



Rachet



Extensions



13mm Socket



10&13mm Wrench



S4

Step 1

Open the package box and take out left part and top part. Match the installation hole of both left part edge and top part edge and then connect them by installing 4* hex bolt group M8_25.

*Don’t locking too tight at this step. Adjustment will be needed in the following steps.




X 4

Step 2

Take out right part and top part. Match the installation hole of both right part edge and top part edge and then connect them by installing 4* hex bolt group M8_25.

*Don’t locking too tight at this step. Adjustment will be needed in the following steps.

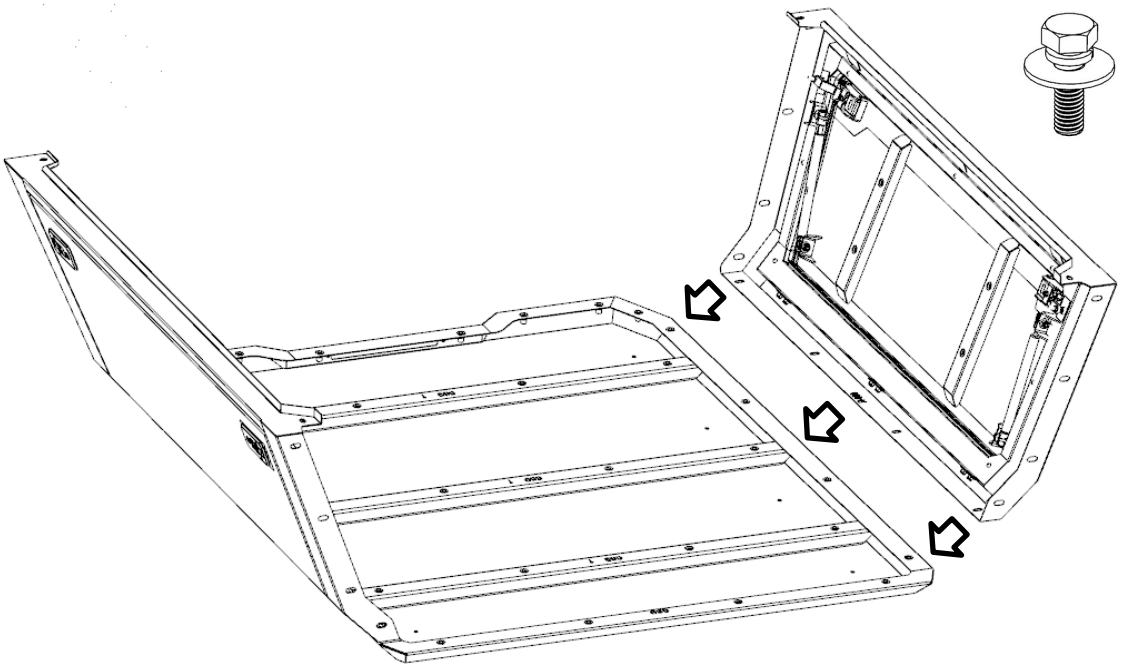


X 4

Step 3

Take out front part. Match the installation hole of left part edge, right part edge, top part edge and front part edge, and then connect them by installing 12* hex bolt group M8_25.

*Don’t locking too tight at this step. Adjustment will be needed in the following steps.

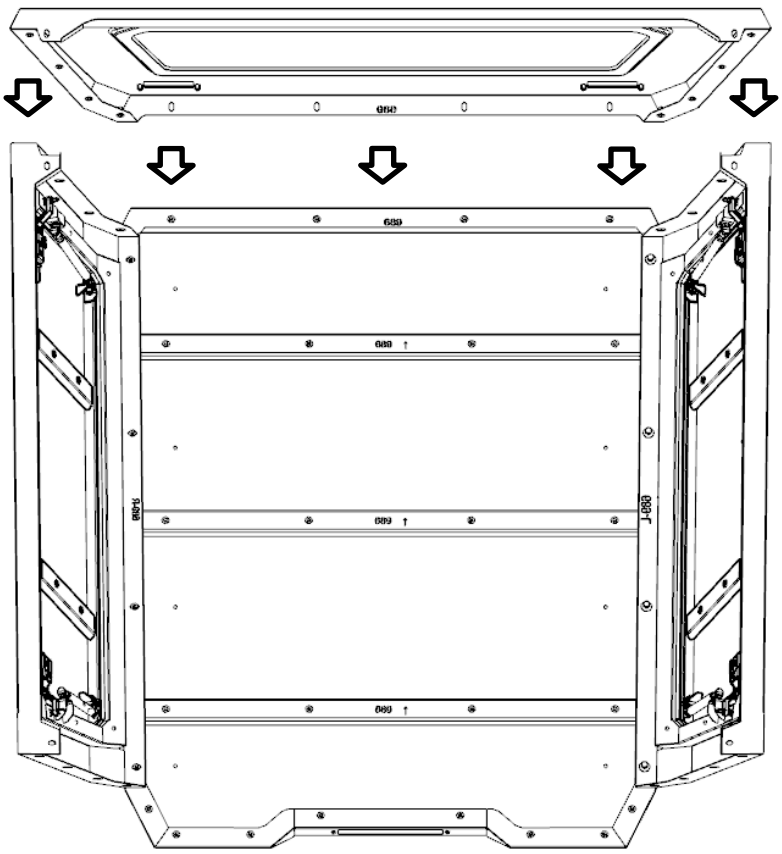





X 12

Step 4

Take out rear part. Match the installation hole of left part edge, right part edge, top part edge and rear part edge, and then connect them by installing 12* hex bolt group M8_25.

*Don’t locking too tight at this step. Adjustment will be needed in the following steps.

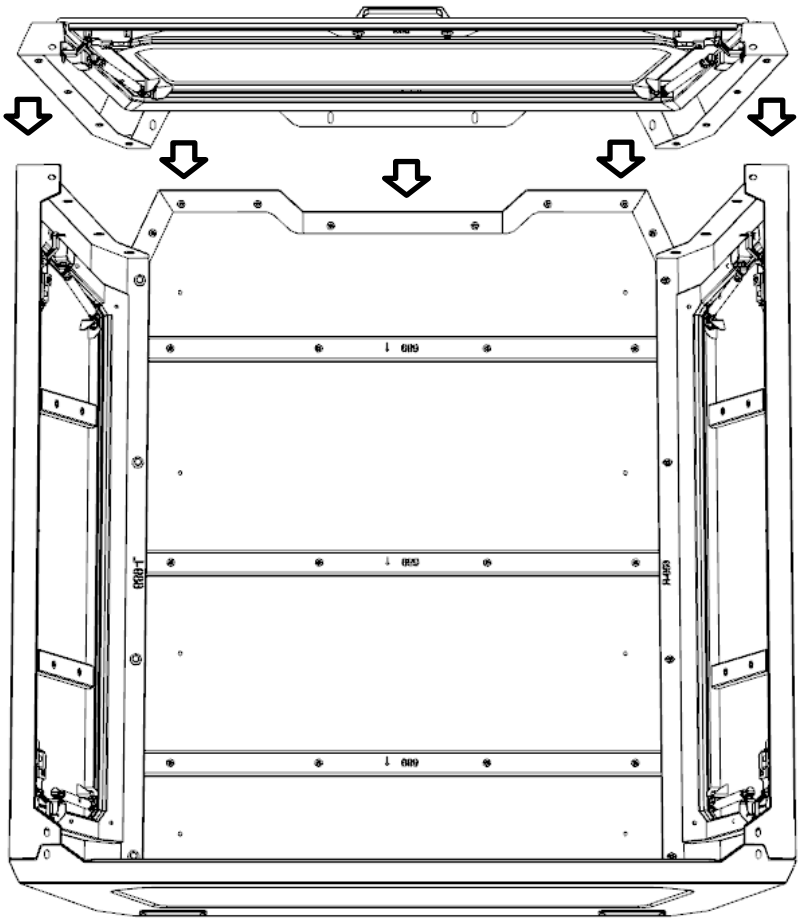


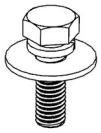


X 16

Step 5


Adjust the gap between each part to be even. Make sure the edge of each part is aligned. Tighten the bolt of left part and right part, and then tighten the bolt of top part.

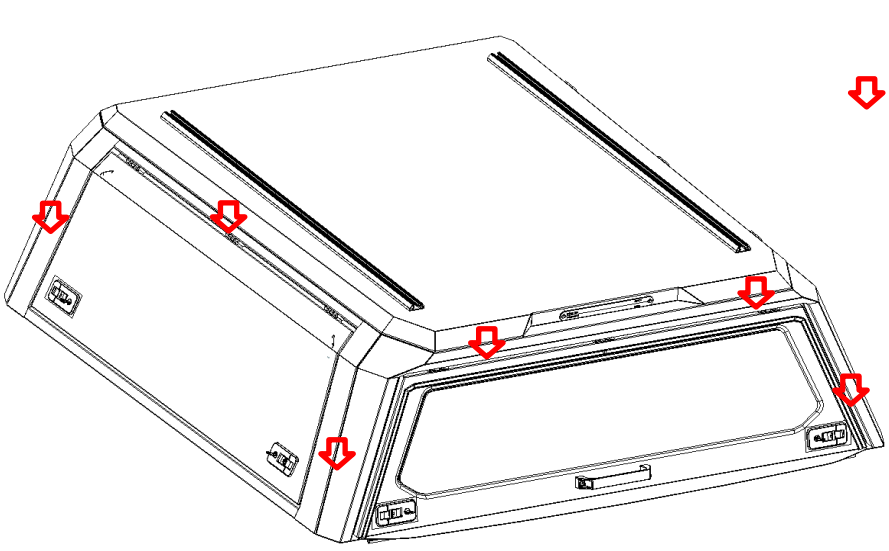

Tighten 16* hex bolt group of left part and right part first

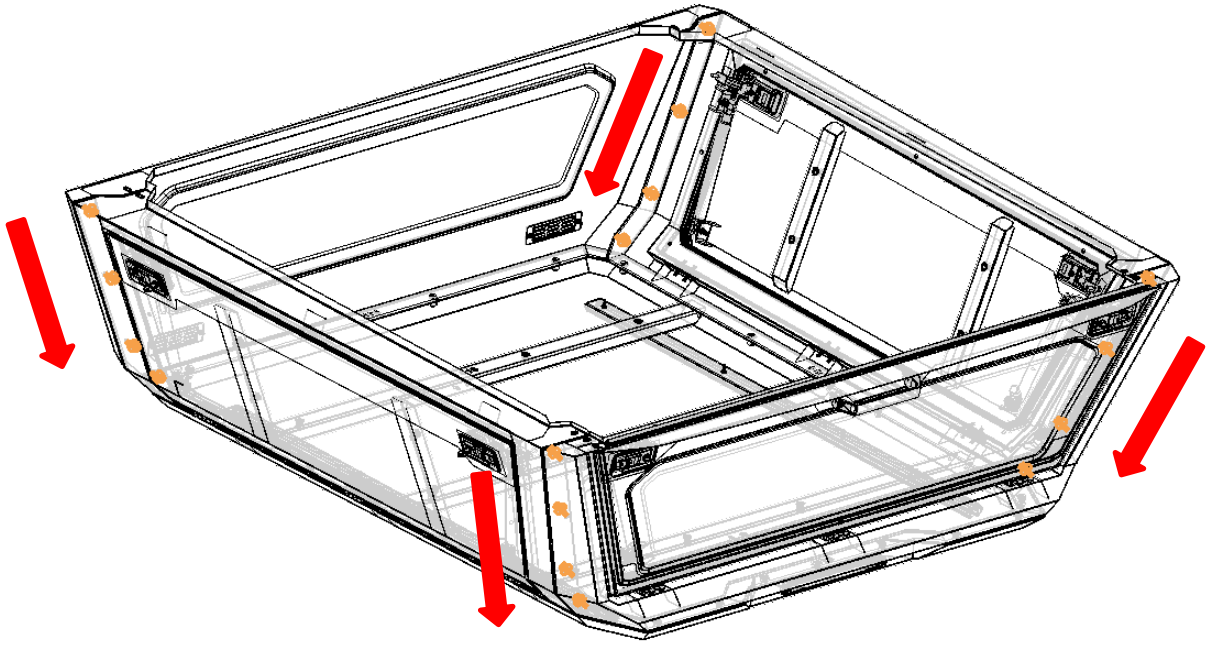


Then tighten 20* hex bolt group of the top part

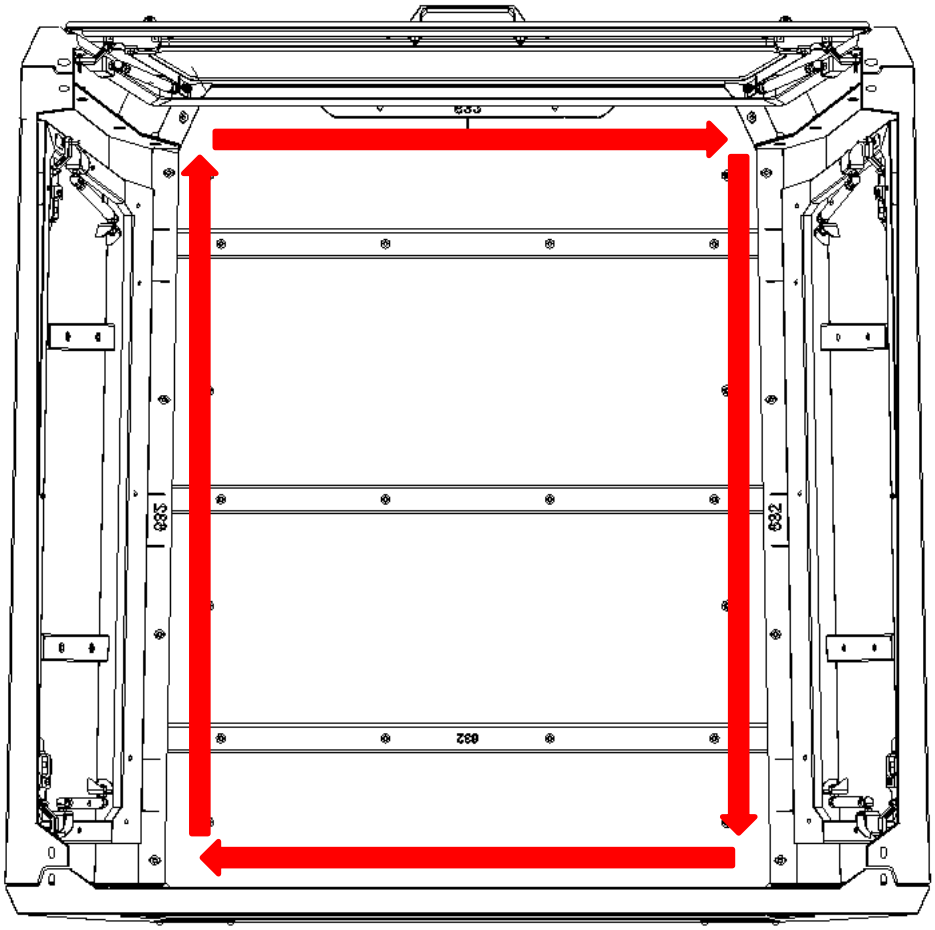

Step 6


Clean the bottom part of the assembled canopy. Take out 1* seal rubber and tear off the release paper. And then stick the seal rubber on the bottom of the canopy.


*Curve the seal rubber when it is on the corner.

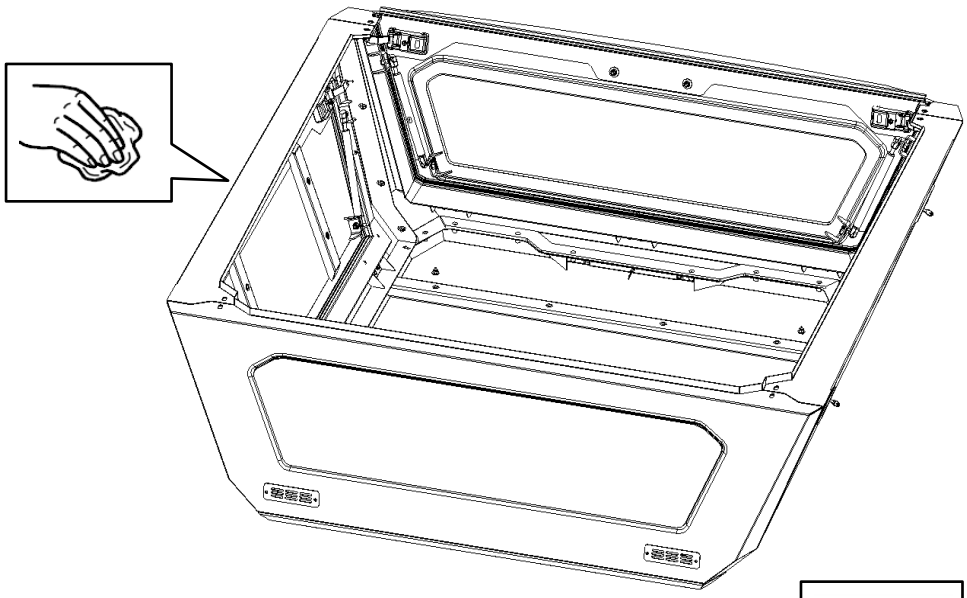




X 1

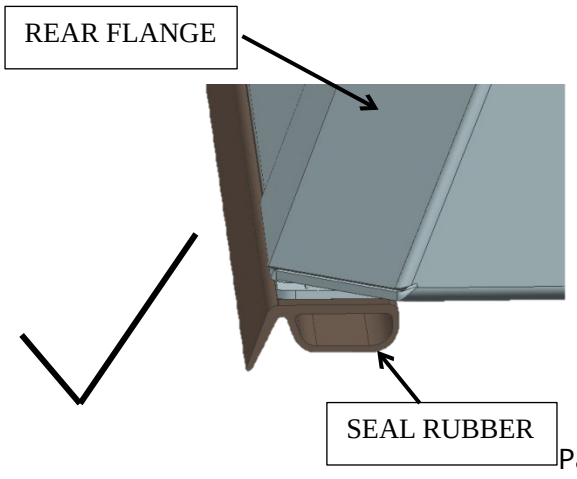


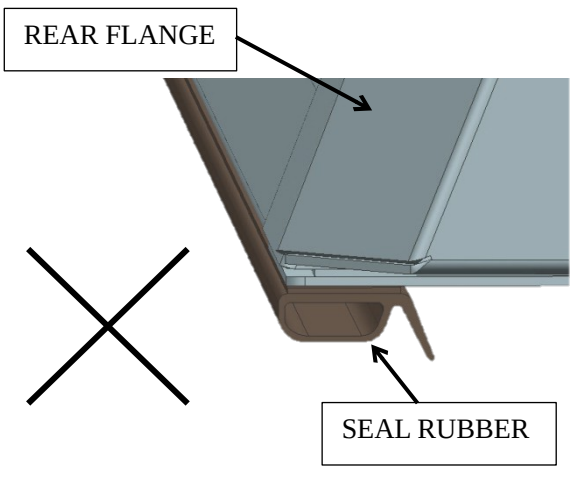


Step 7


Take out 1* front foam tape and tear off the release paper. And then stick the front foam tape on the groove of the bed. Cut off the excess parts.

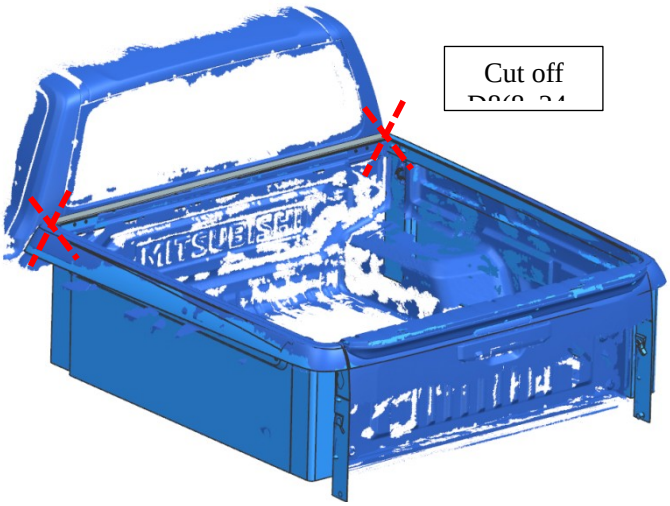


Fitting kit

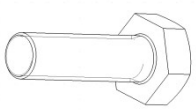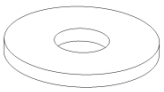① HEXAGON NUTS M8	② HEX BOLT M8_25	③ LARGE WASHER D8
 X 8	 X 8	 X 16


④ HEX BOLT GROUP M8_25

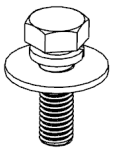 X 12


FRONT BRACKET (LEFT)

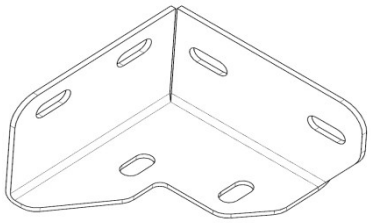 X 1


FRONT BRACKET (RIGHT)

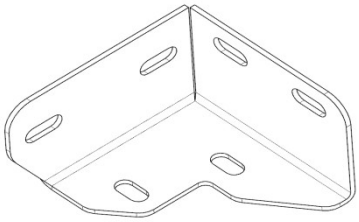 X 1

REAR BRACKET (LEFT)

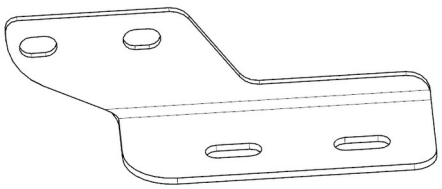 X 1

REAR BRACKET (RIGHT)

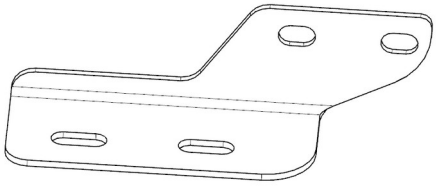 X 1

Tools


Rachet



Extensions


10mm&13m m Socket



10mm&13mm Wrench

Step 8

Match the front bracket (left) with the factory hole of the bed, and then install it on the bed by ④. Please repeat this step on another side.



X 4

HEX BOLT GROUP
M8_25

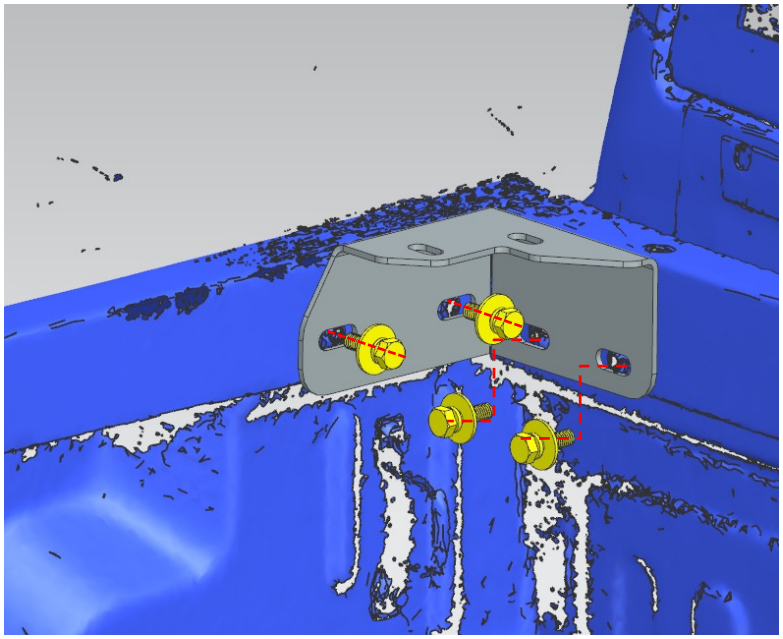


Step 9

Match the rear bracket (left) with the factory hole of the bed, and then install it on the bed by ④. Please repeat this step on another side.


X 2

HEX BOLT GROUP
M8_25

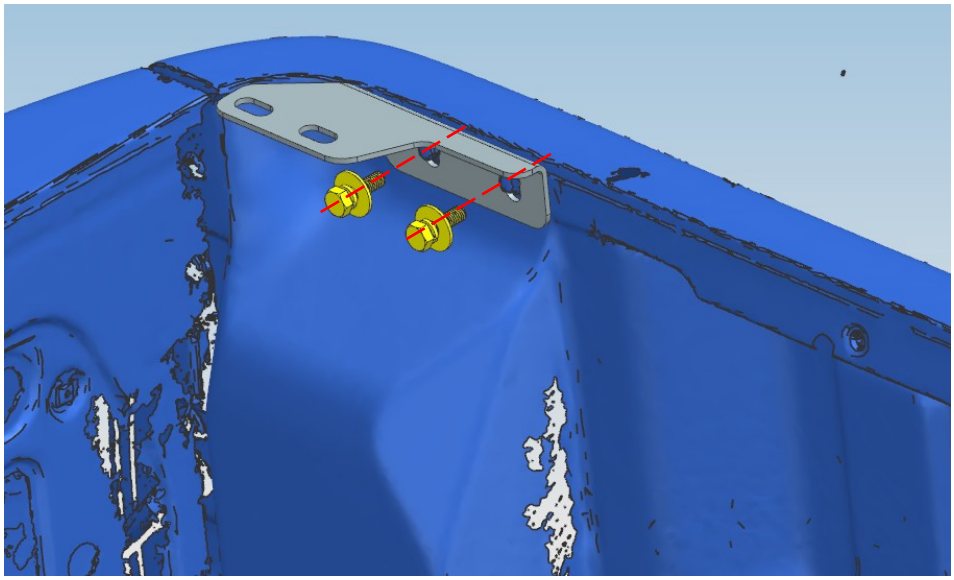


Step 10

Lift up the assembled canopy on the bed by at least 4 people.


*Don’t slide the canopy on the bed in case destruction to the seal rubber.




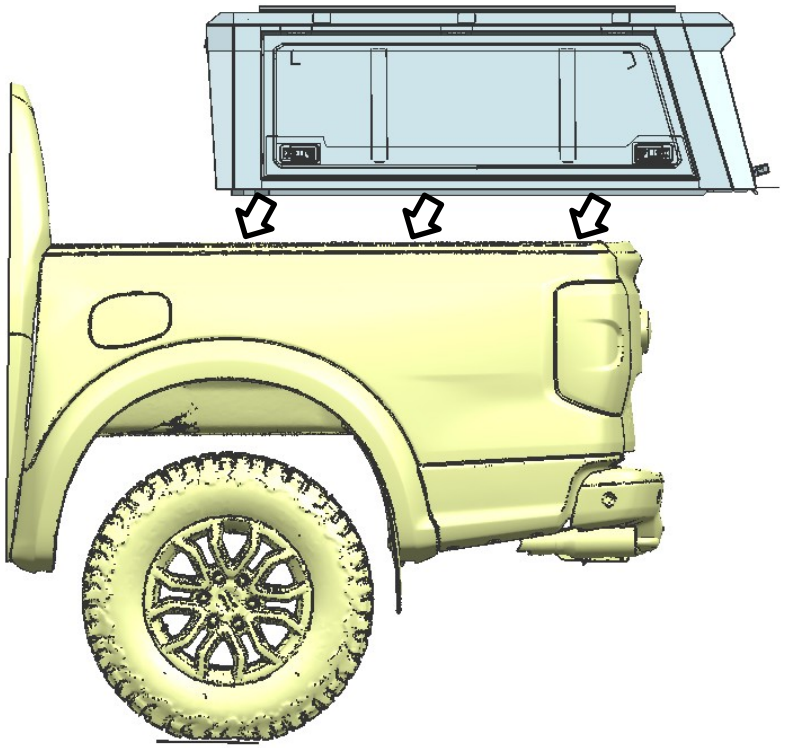


Step 11

Check the location of the canopy to put it on the center of the bed. Please note to leave space of at least 20mm between the canopy and the cab. Don’t push the canopy too close to the cab.

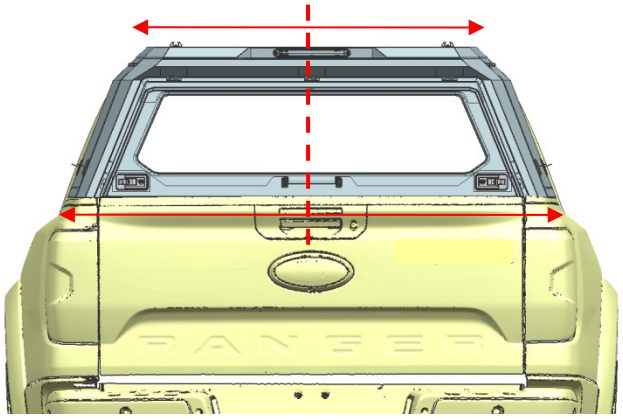

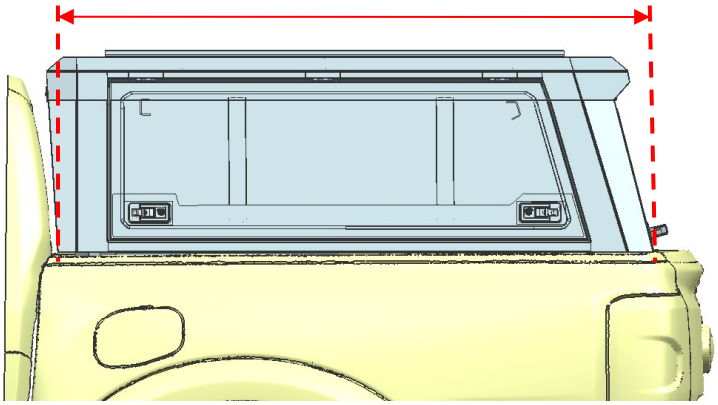




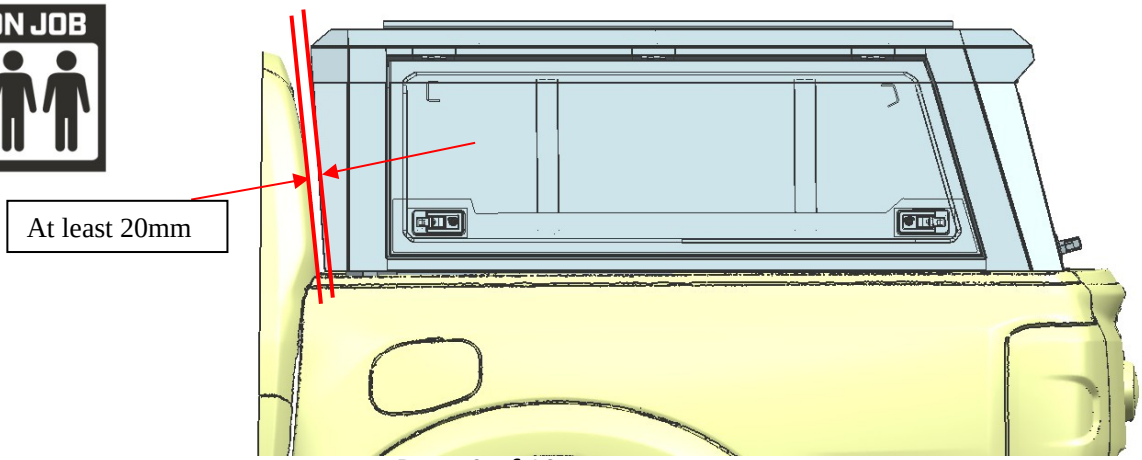


Step 12

Walk around the bed to check the installation of the seal rubber, make sure it is correctly pressed under the canopy.

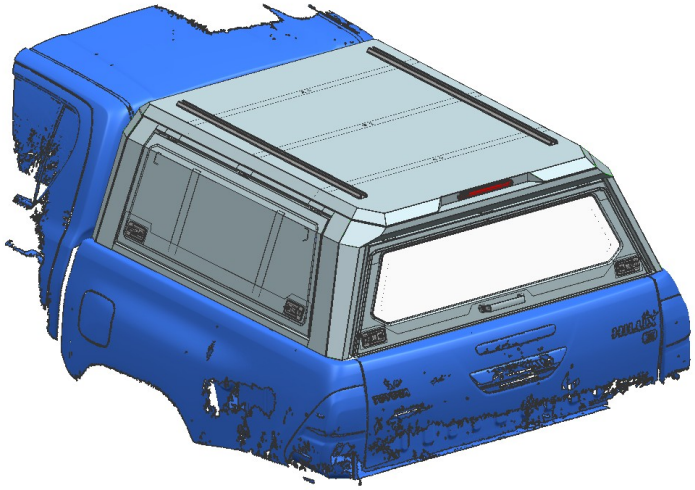

Step 13

Move the canopy to match the installation hole of the bottom part of canopy and the front bracket (left), and then install them by①, ② and ③. Please repeat this step on another side.



X 2

HEX BOLT M8_25




X 4

LARGE WASHER D8



X 2

HEXAGON NUTS M8

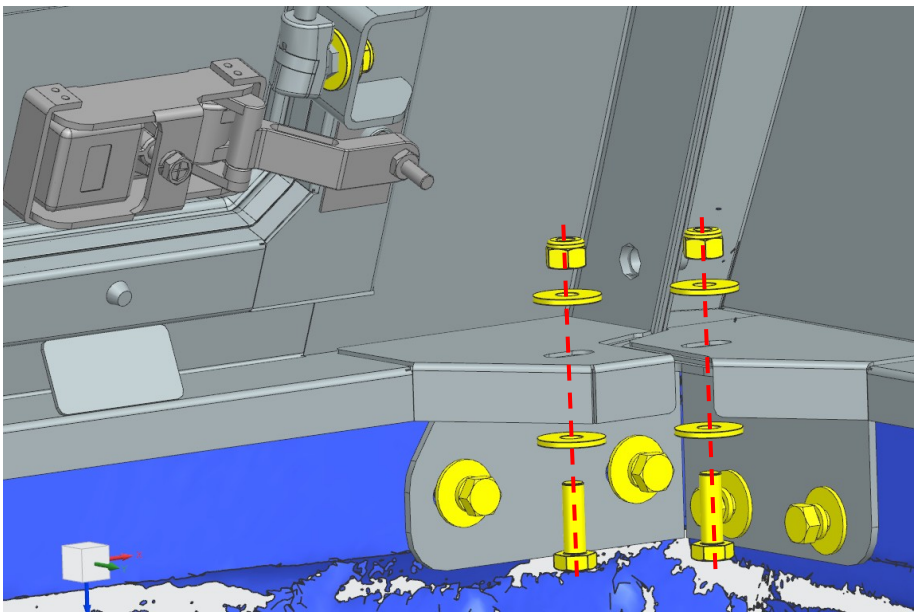

Step 14

Move the canopy to match the installation hole of the bottom part of canopy and the rear bracket (left), and then install them by ①, ② and ③.

Please repeat this step on another side.



X 2

HEX BOLT M8_25



X 4

LARGE WASHER D8



X 2

HEXAGON NUTS M8

