

Installation Instruction for R2 Electric Roller Shutter




⚠ NOTICE:

- ↵
- ↵ All the pictures in this manual are for reference only, the pictures may be different from the actual product, but the installation method is the same.
In order to facilitate your installation, please read the product manual carefully before installation; please protect the surface of your car during installation to avoid scratches.
- ↵ Please regularly check whether all the accessories connected to the car are loose to ensure safe use.
- ↵ Distinguish the left and right directions according to the forward direction of the front of the car.

Accessory case overview diagram

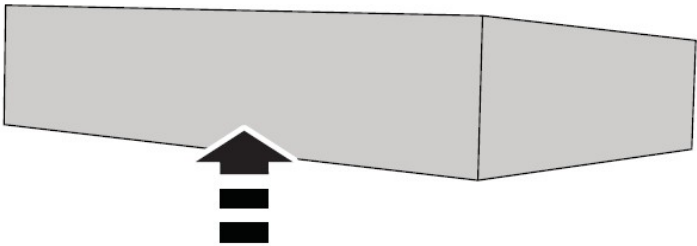


配件箱
Fitting kit

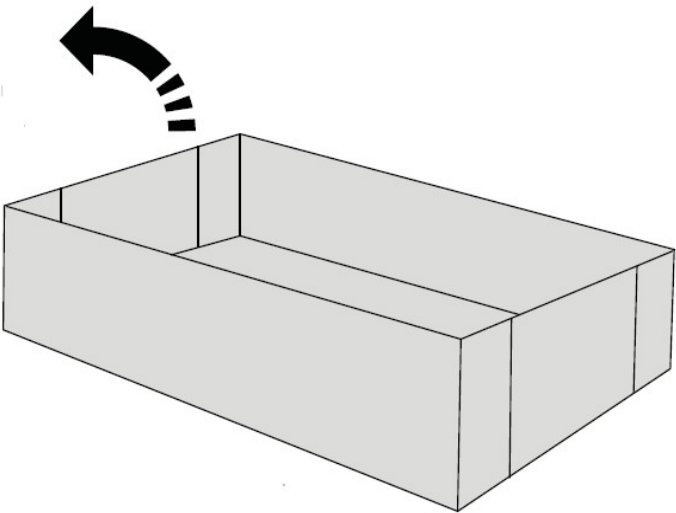

KIT CONTENTS - COMPOENT NUMBER AND QUANTITY

1

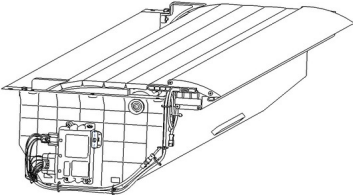

CANISTER ASM. QTY:1

2




1
SIDE RAIL (L) QTY:1

3




SIDE RAIL (R) QTY:1

4

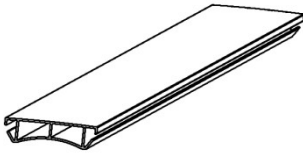

ALU STANDARD BAR QTY: 1


5

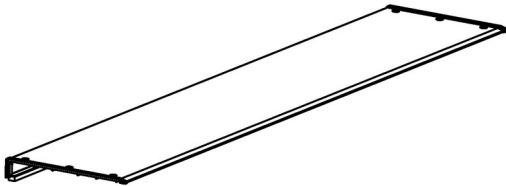

COVER PLATE QTY: 1


FITTING KIT IN BOX

7

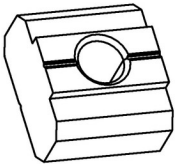

M6 T-Nut QTY: 6

8

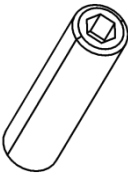


Inner Hex Thread Rod
M6×25 QTY: 6

9




Large Washer D6
(6x18x1.6mm) QTY:12

10

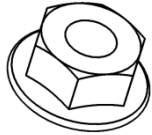


Flange Nut M6 QTY: 9

11




End cap for side rail
QTY:2

12

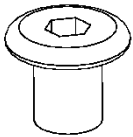


M5×6 QTY: 6

13




Plastic Base QTY: 6
(For top plate)

14

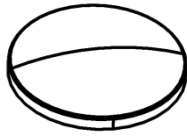

Plastic Cap QTY: 6
(For top plate)

15



16



Front Drainage Tube

17











Rubber Washer


18



Rubber Washer QTY: 6

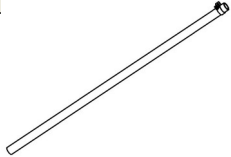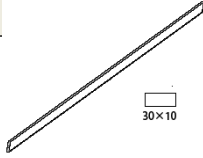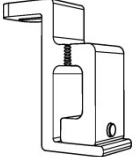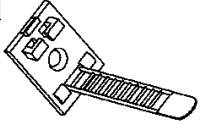19  Rear drain tube assembly QTY: 2	20  Rear Foam Tape (1650×30×5) QTY: 1	21  Front Foam Tape (1650×30×10) QTY: 1	22  Clamp assembly QTY: 6
23  Rod for Gear box QTY: 1	24  Nylon Cable Tie (2.5×140) QTY: 10	25  Cable Tie with holder QTY: 8	26  Allen Wrench S=5 QTY: 1
27  Allen Wrench S=3 QTY: 1			

FITTING KIT ADDITIONAL ITEMS


28  WIRE HARNESS QTY: 1	29  REMOTE CONTROL QTY: 2	30  INSTALLATION INSTRUCTIONS QTY: 1	31  OWNERS MANUAL QTY: 1
--	--	--	---

Name: R2 Electric Roller Shutter


TOOLS REQUIRED – NOT SUPPLIED IN KIT




Phillips Screwdriver




Flat Screwdriver

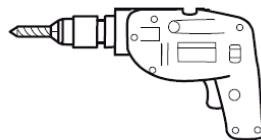


Drill



Holesaw

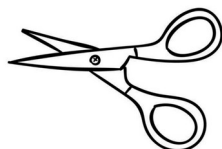

Scissors


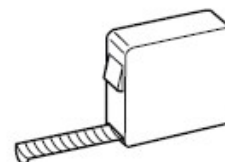



Tape measure





Non-permanent pen

SIDE RAIL INSTALLATION

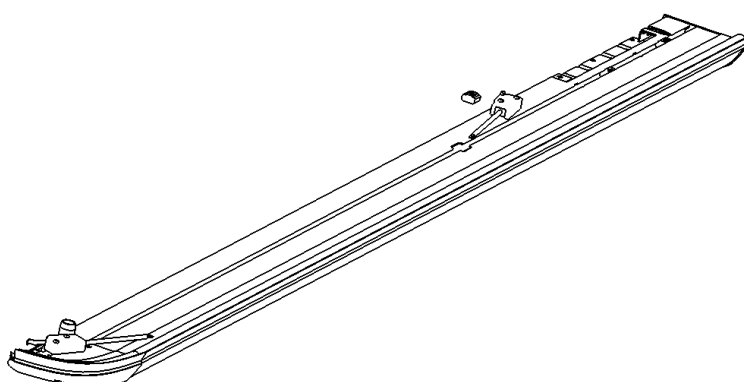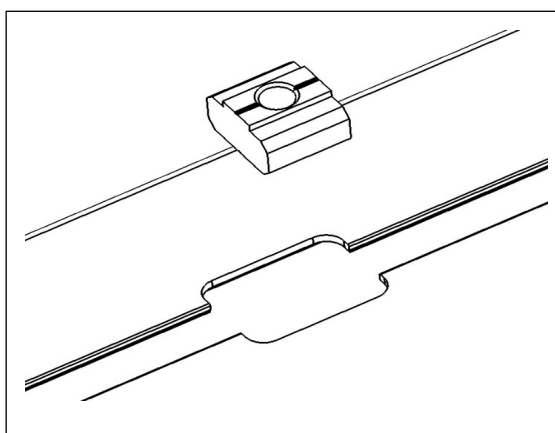

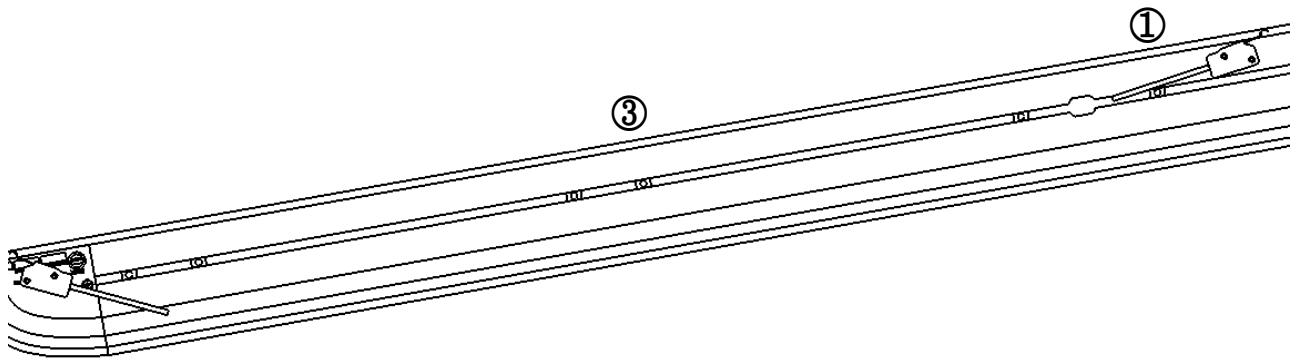


Approximately adjust the position of the sliding nut according to the position of the serial number in the figure.

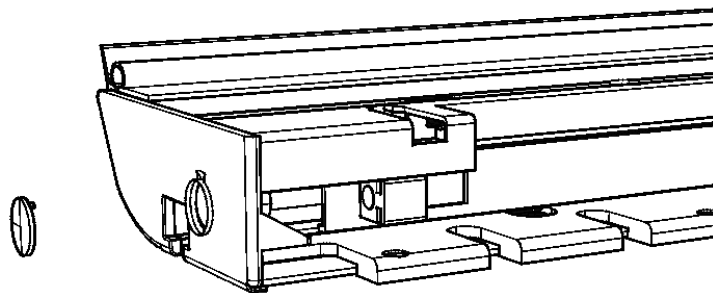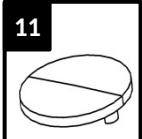


Press the small black rubber cap into the screw hole on the front end of the side rail. Assembly way is same on both sides.

SIDE RAIL & CANISTER

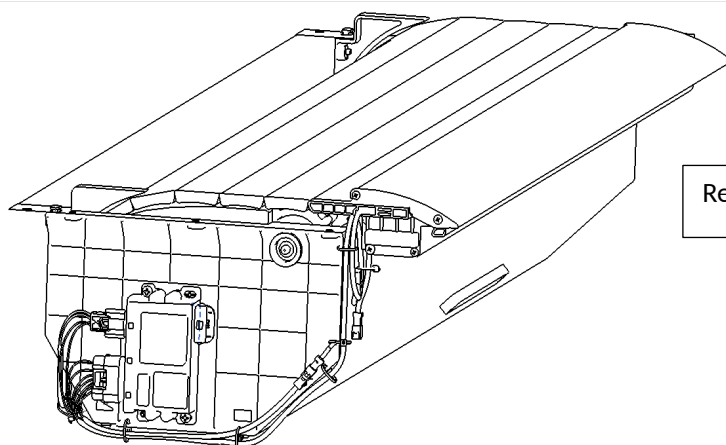


Rear Shutter



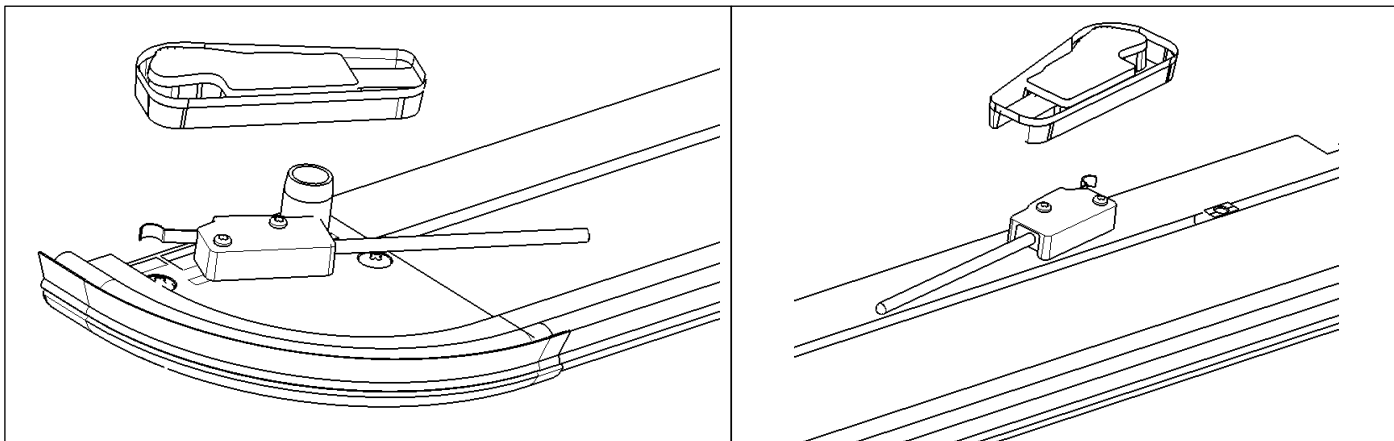


Tear off the limit switch protective shell on the side rail.

Notice: There is no need to loosen the screws above, just tear them off.

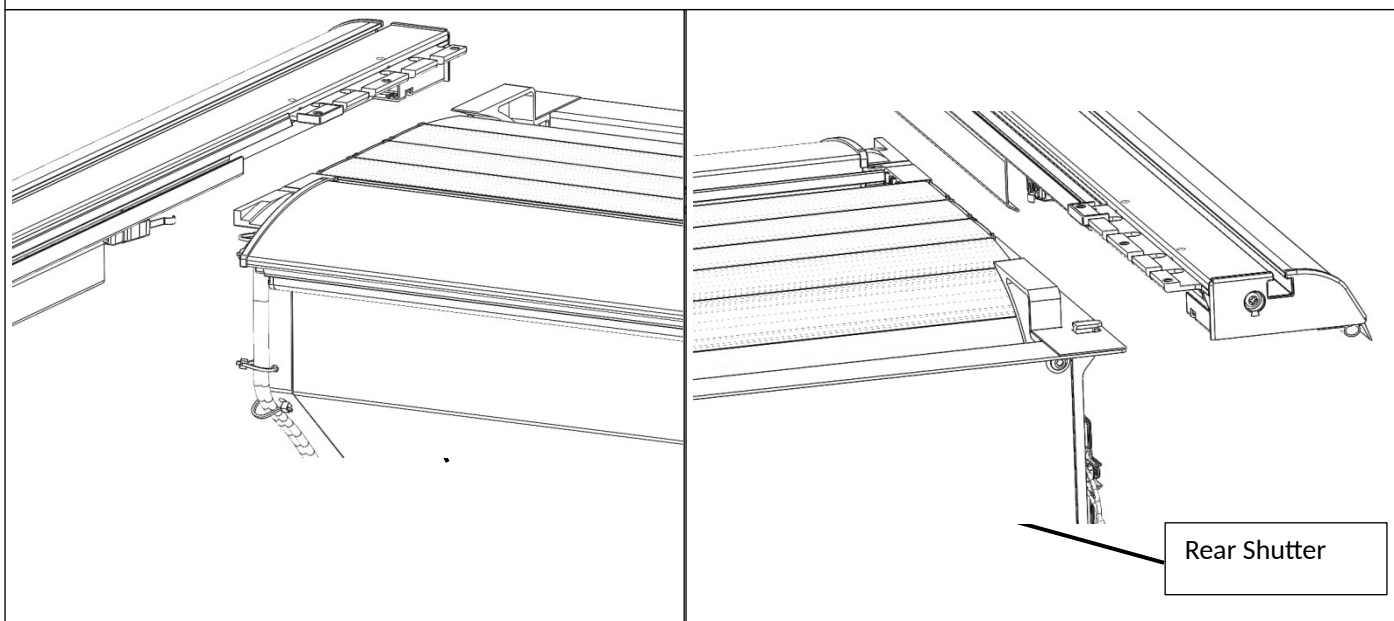


After the baffle is installed, install the side rail on the box body, slightly lift the end of the door without lock, the side rail slide rail faces the end, and the notch of the side rail faces the upper positioning boss of the box body.

Notice: During the installation of the side rail, avoid the end of the door without locking the door from colliding with the shrapnel of the limit switch.


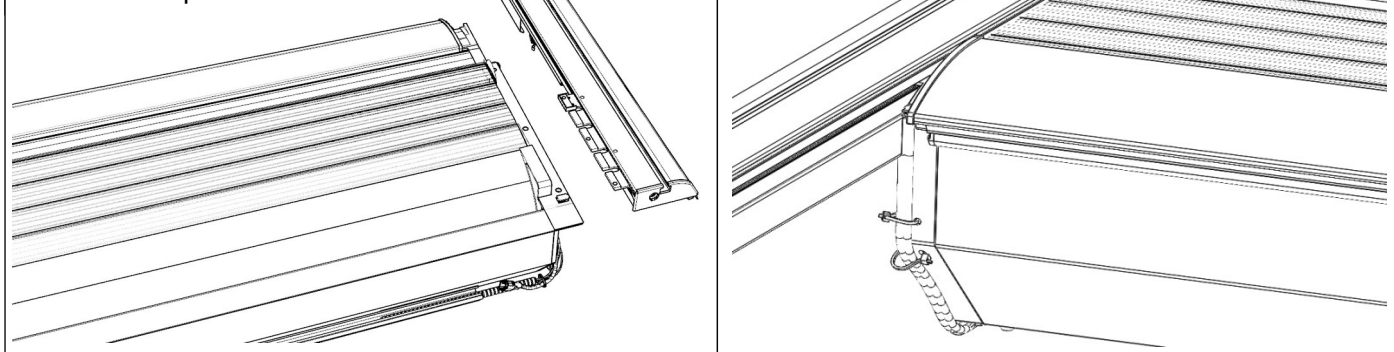


Place the side rail on and align.


Notice: Be careful, the switch may get damaged if it hit the register harshly.

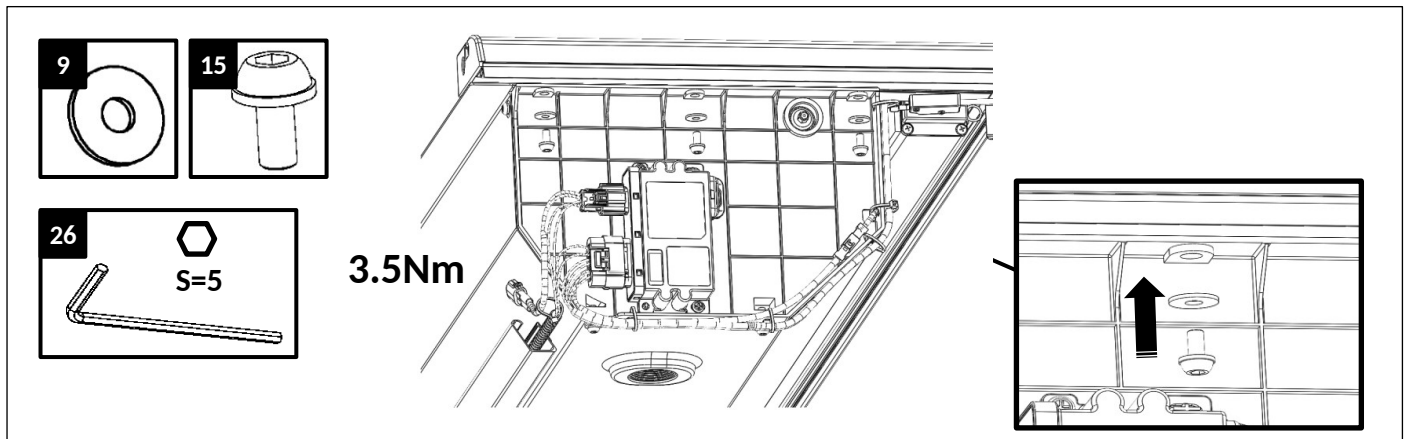



Place the side rail and align, tighten it with M6 Bolt combo.

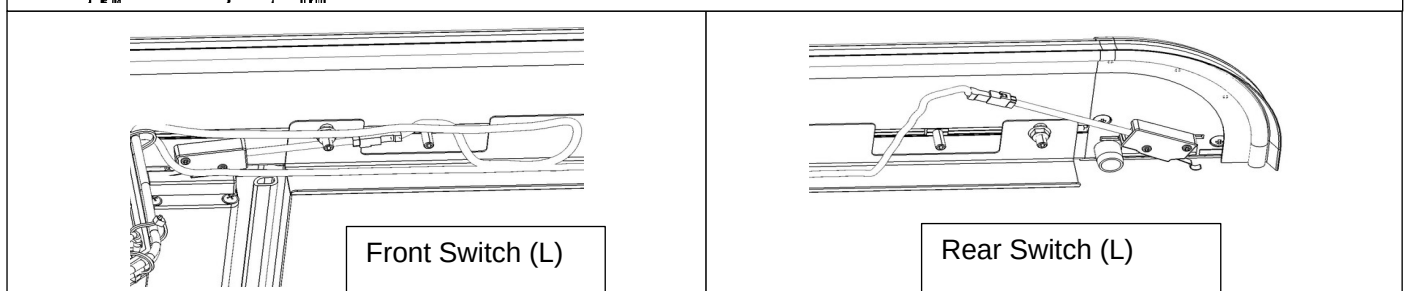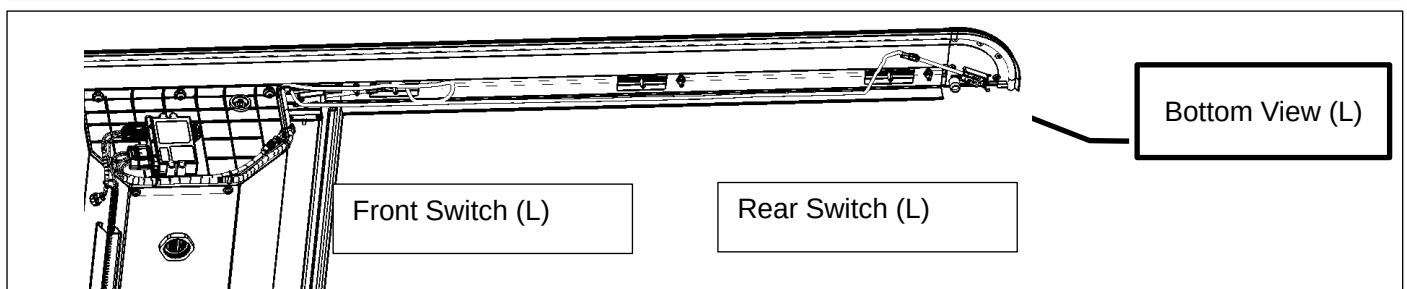


Connect the disconnected limit switch harness to the corresponding limit switch on the side rail.




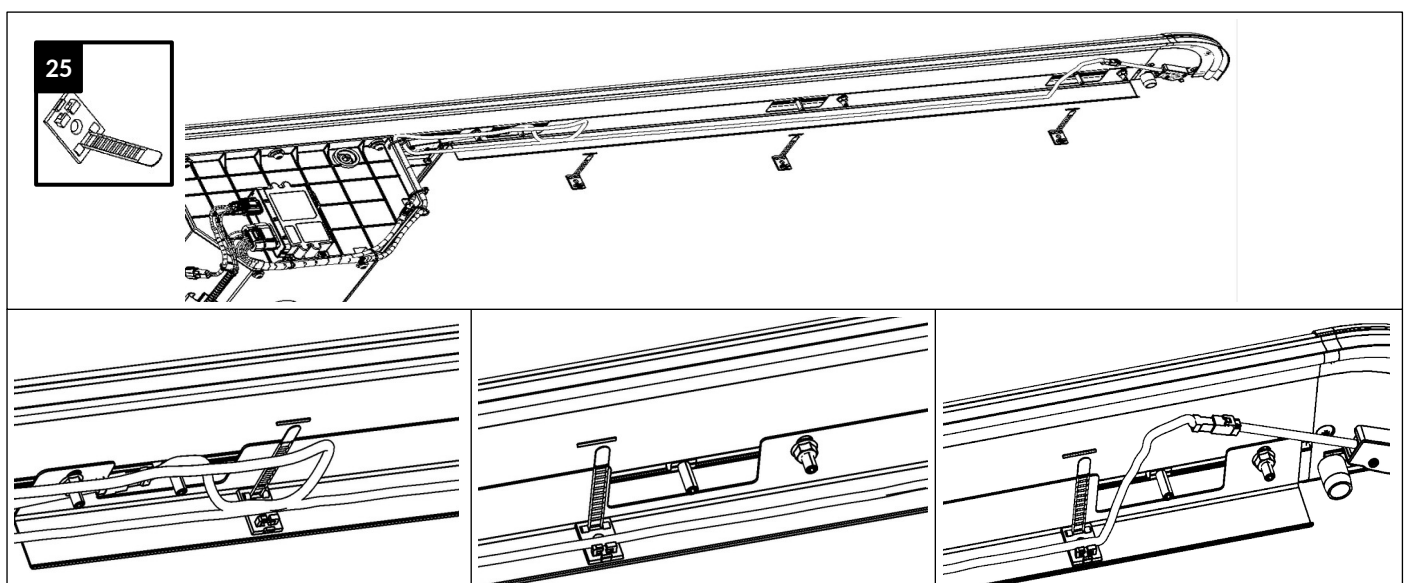


Name: R2 Electric Roller Shutter




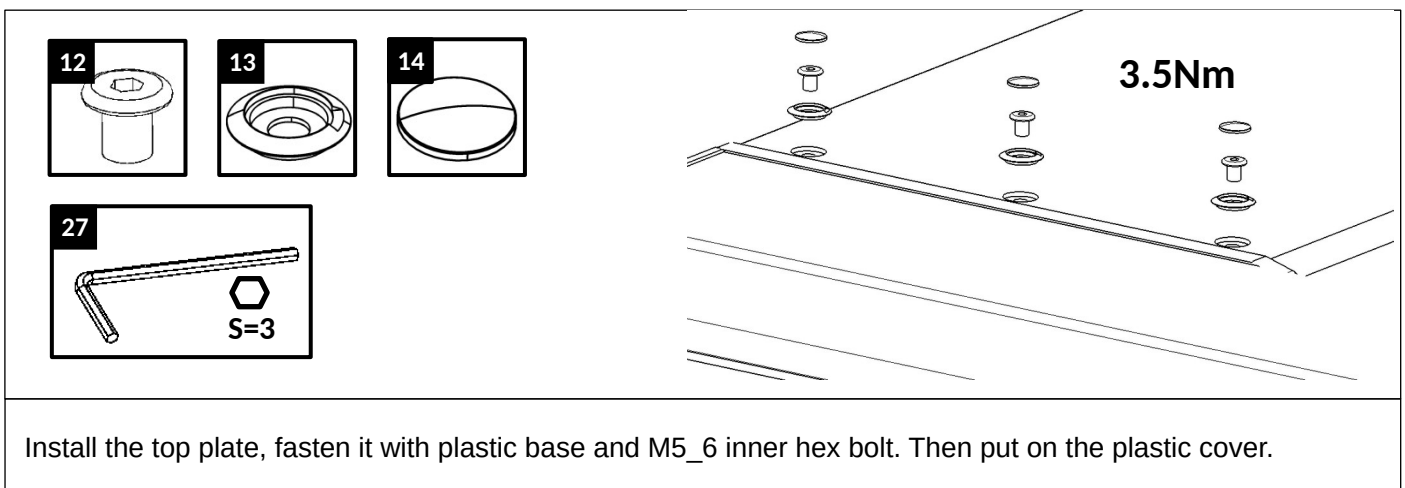
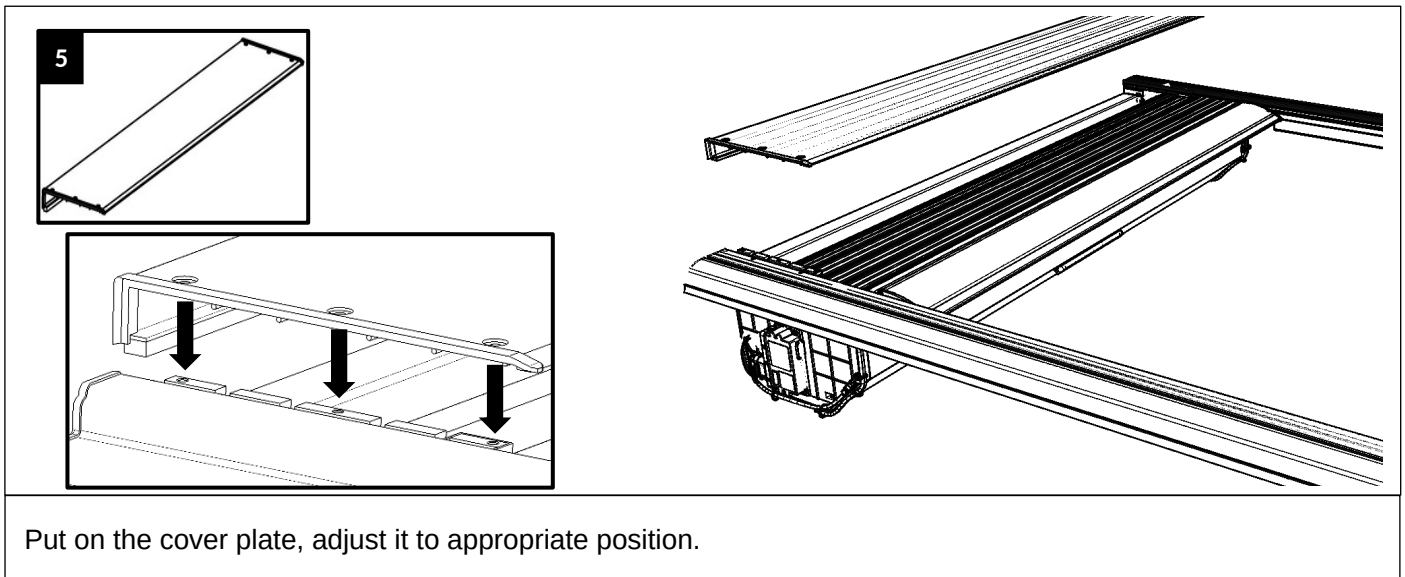


Drilling Holes for Drainage Tube

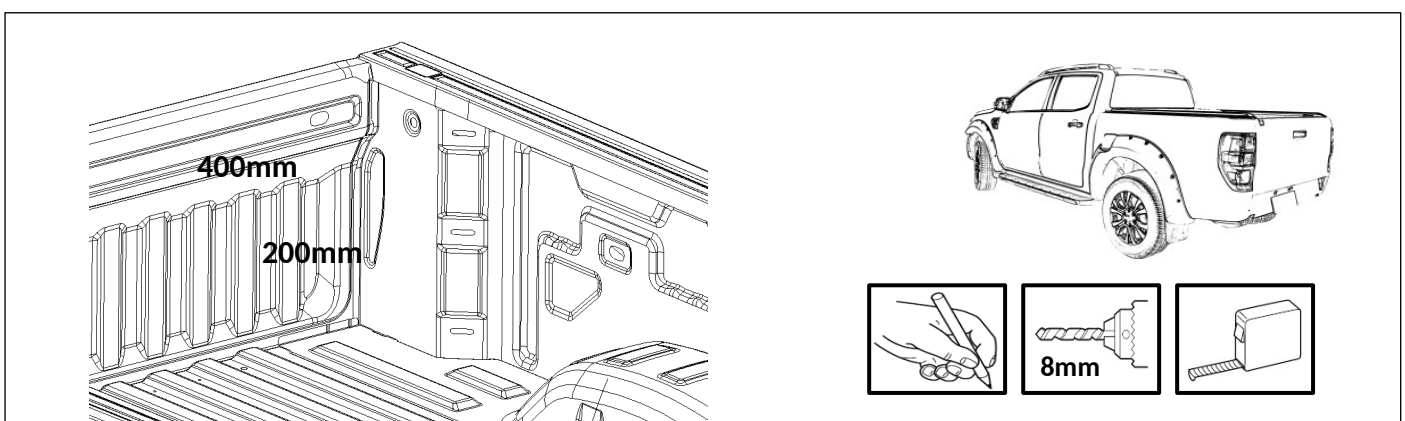

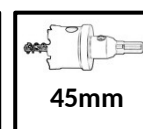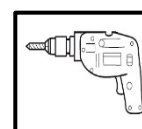
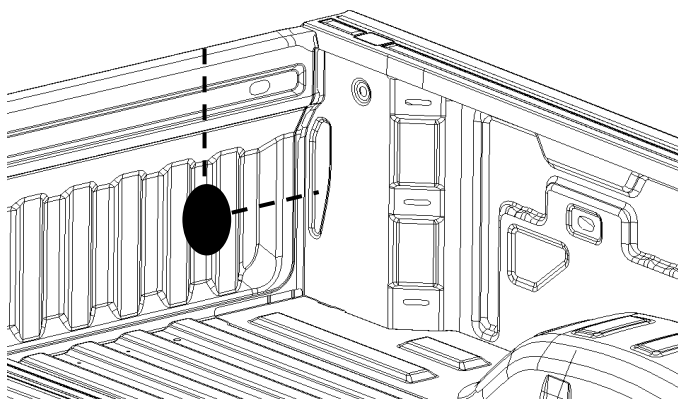
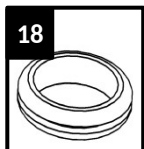


Drill out the front pilot holes in the truck bed with 45mm holesaw. To avoid getting rust, you should paint the drain hole on truck bed before putting on the grommet.

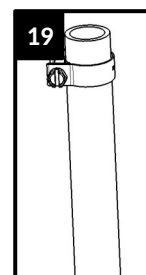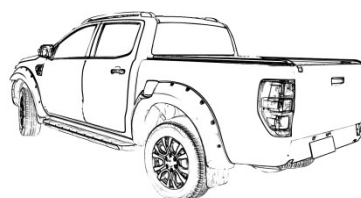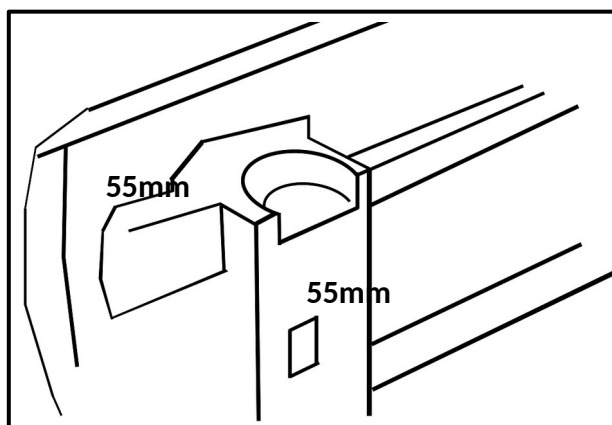


Measure and markup the positions for the rear drain tubes on both sides. Drill the locations with 20mm holesaw. Notice: Just for reference, for some vehicles the rear drain hole positions would be different.



Route the Wiring Harness

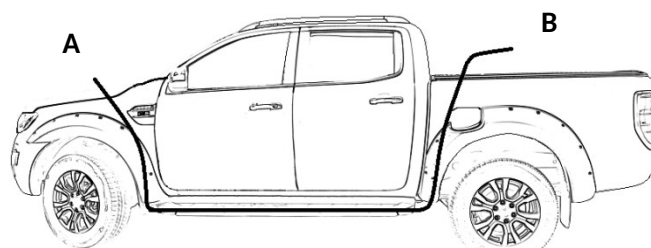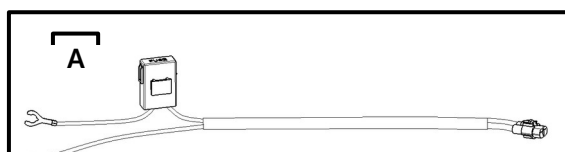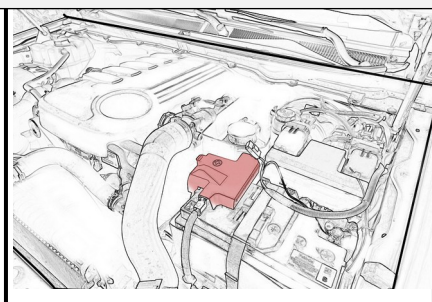

24

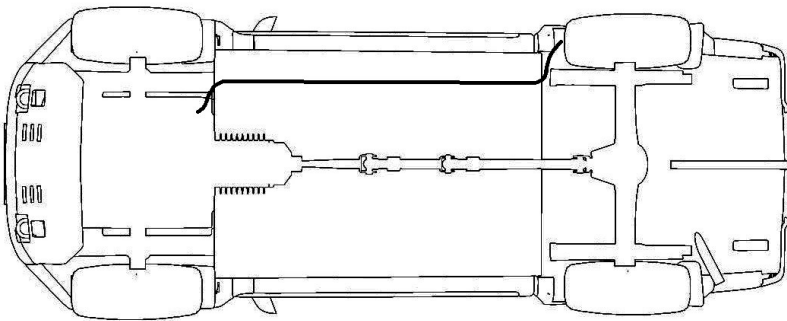



Attach the wiring harness to the chassis rail using hole in the tab mount, use cable tie.

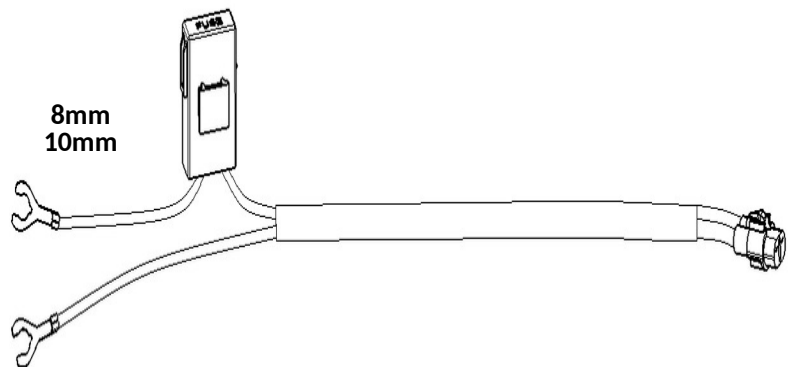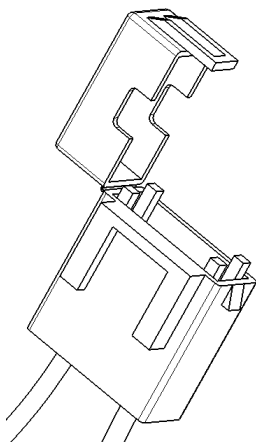


Pull out the fuse from the fuse box, and then connect the vehicle wiring harness to the positive and negative terminals of the battery. **NOTE : Black- Negative; Red- Positive. After all installations are completed, assemble the fuse.**

Put the Roller Shutter on Truck Bed


21

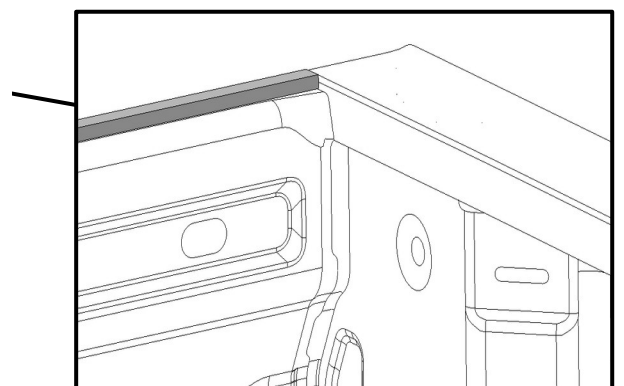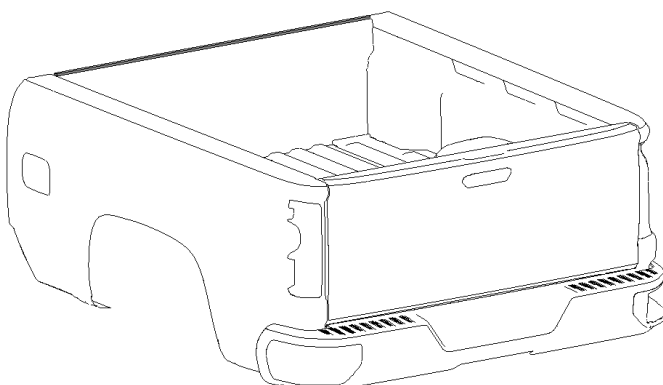


Name: R2 Electric Roller Shutter

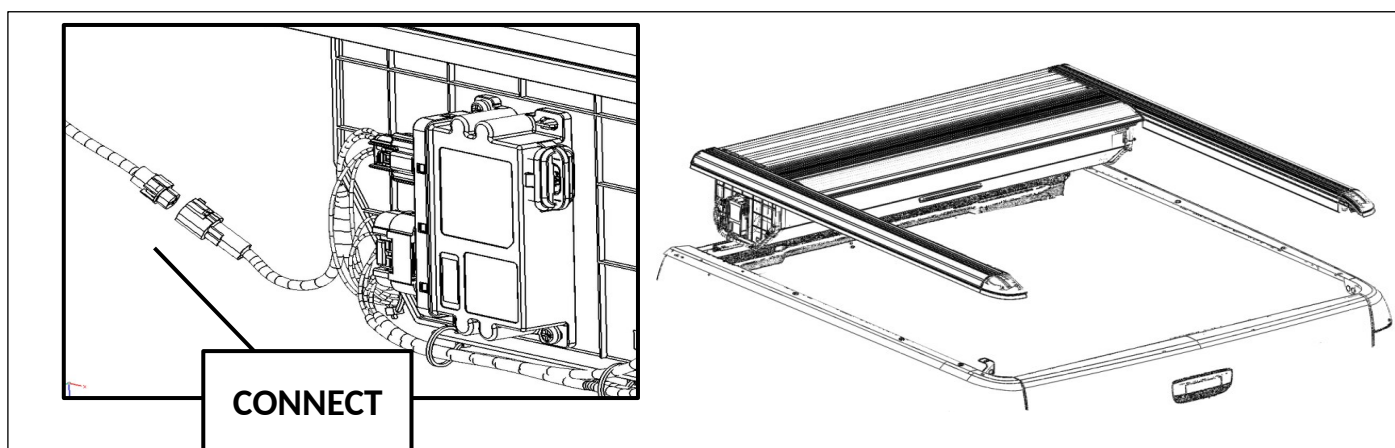


Put the roller shutter on truck bed, and then connect the wire harness.







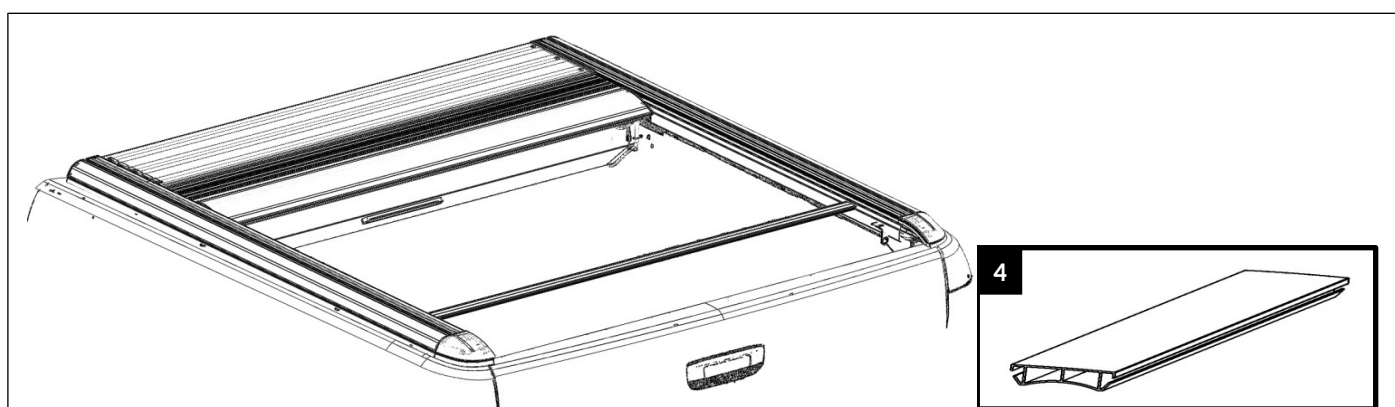


Put on the Aluminum standard bar, to keep the side rails on parallel status.



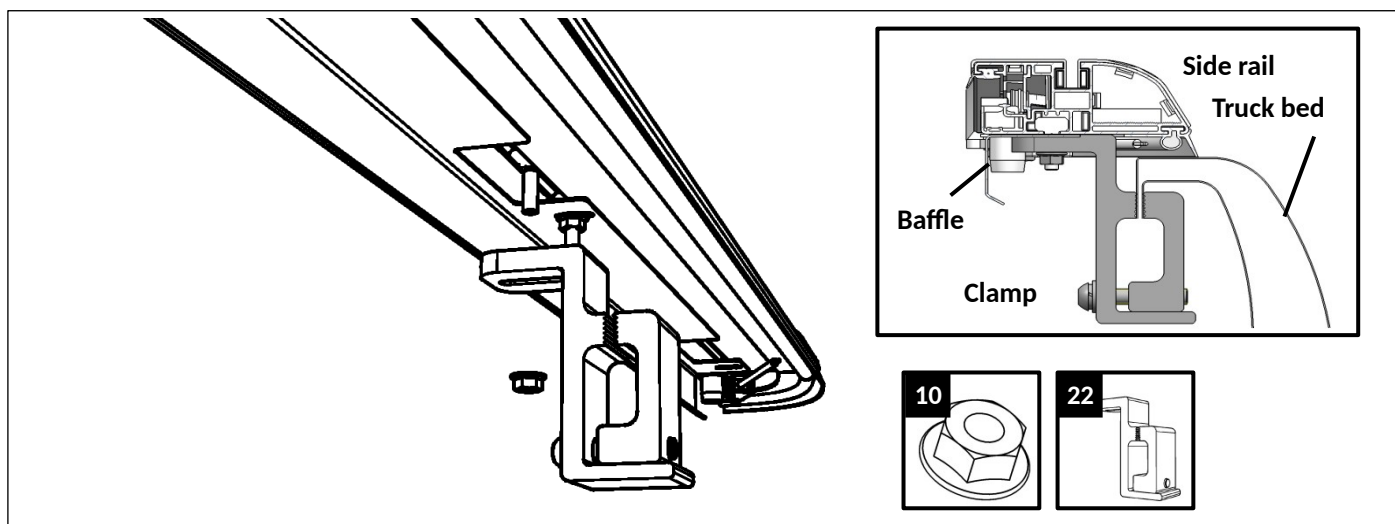


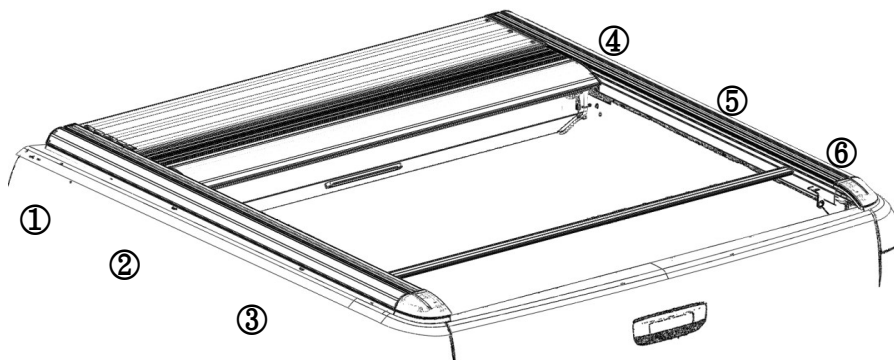


Install the clamps on left and right side rails, above picture is the clamping position for reference.

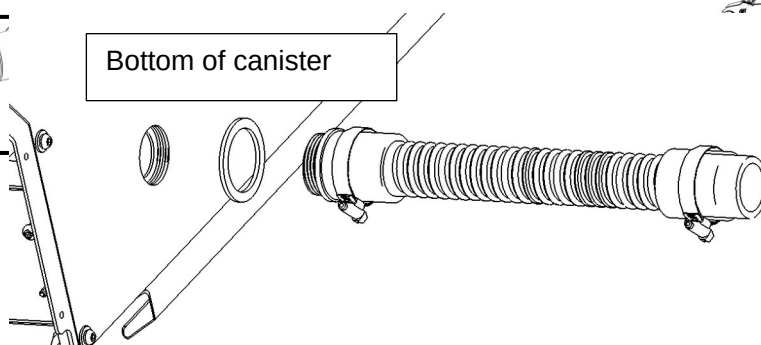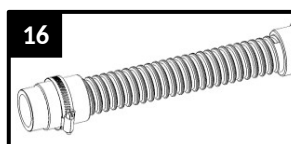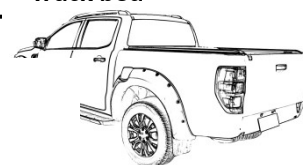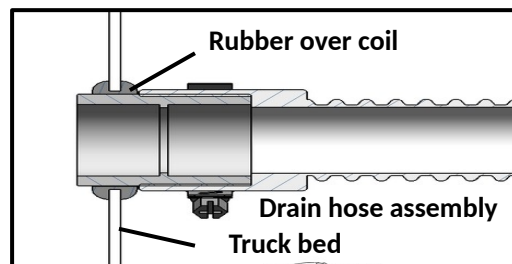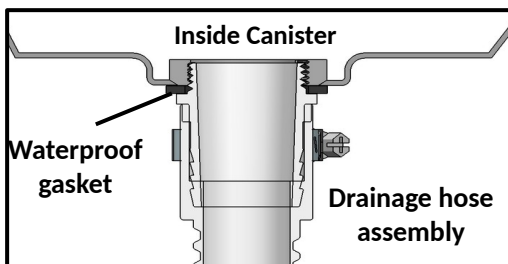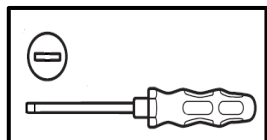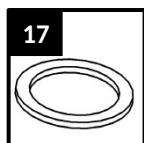


Put a waterproof gasket on the threaded end of the drainage hose assembly, screw on the hole at the bottom of the roller blind box, and plug the other end into the hole of the tail box. Finally, use a flat-blade screwdriver to tighten the hose clamps at both ends of the drainage hose.

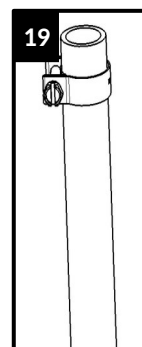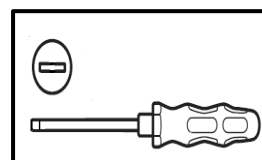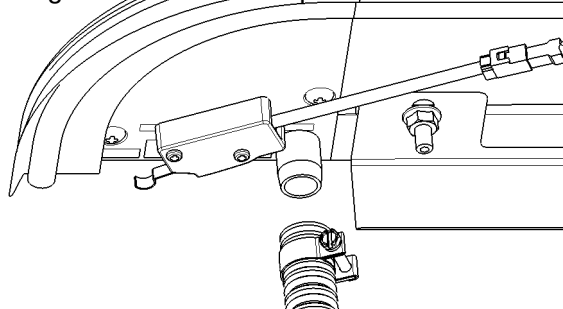

Screw the rear drain bellows to the leaking hole at the rear end of the side rail, and use a flat-blade screwdriver to tighten the hose clamp on the bellows.

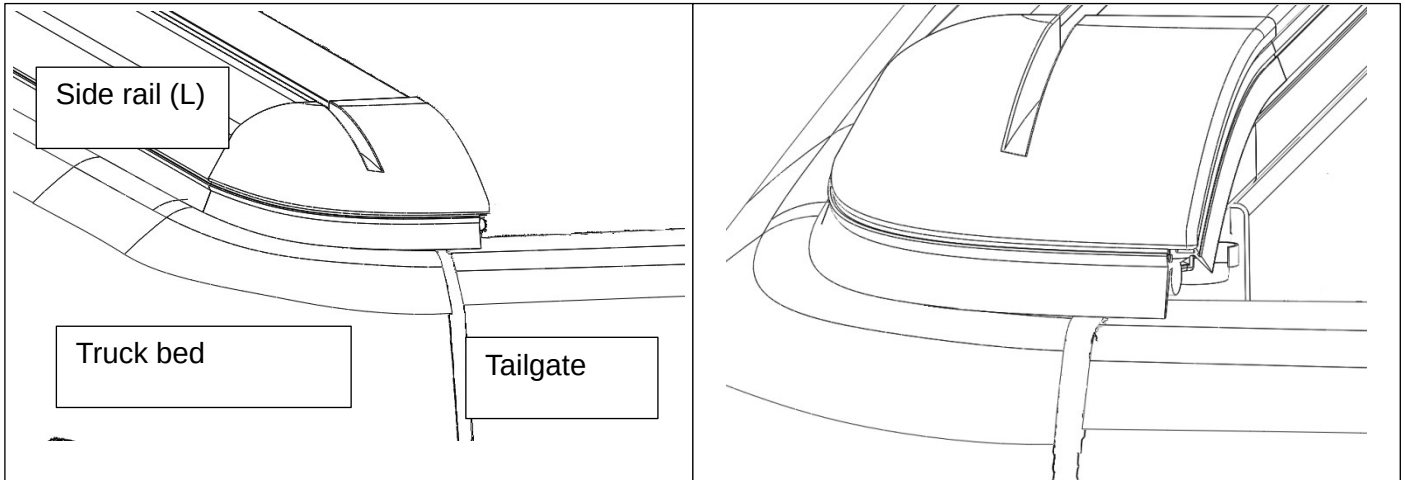

When closing the tailgate, if there is interference between rubber strip and tailgate, please trim the rear rubber strip as above picture shows.

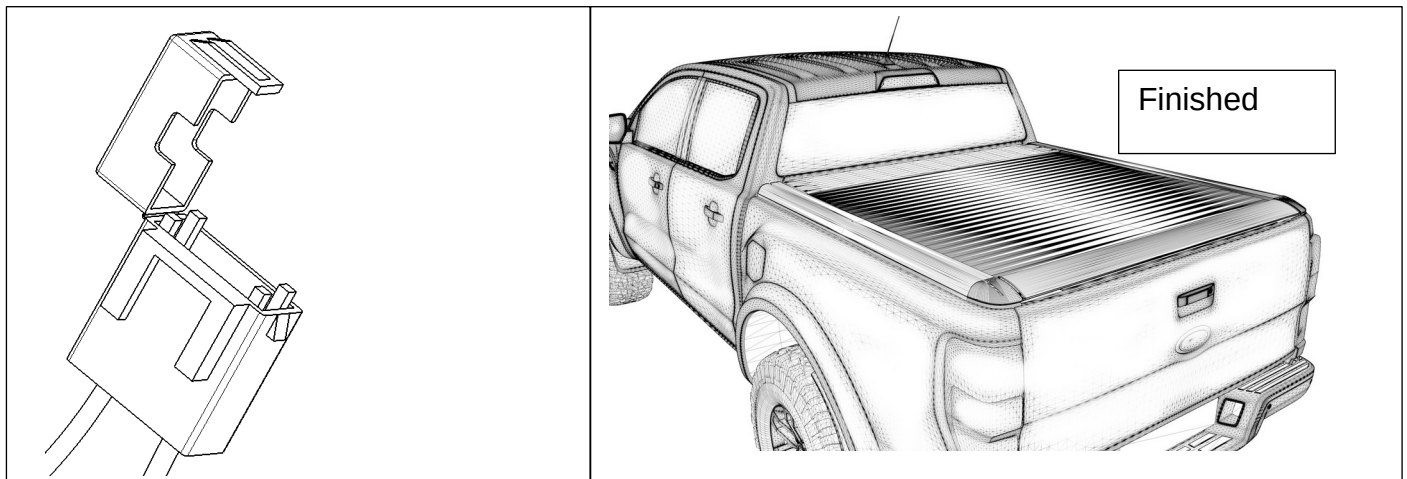

Finally, insert the fuse back to the fuse box of the power wiring harness to complete the installation of all the roller blinds. **Notice:** There is no distinction between the front and the back of the fuse.