INSTALLATION INSTRUCTIONS

PART# PW012604

BED HAMMOCK(LENGTH ADJUSTABLE)

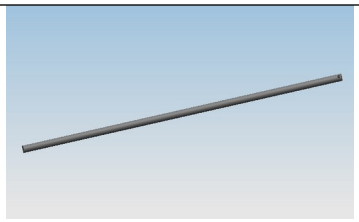
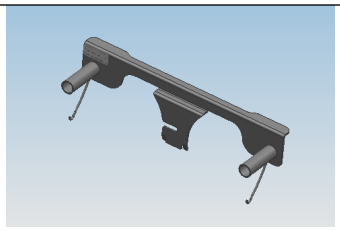
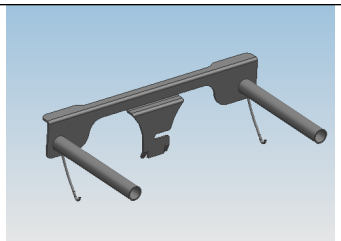
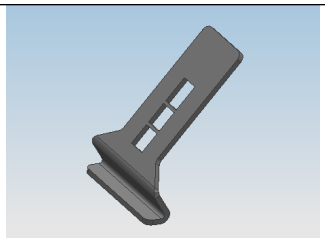
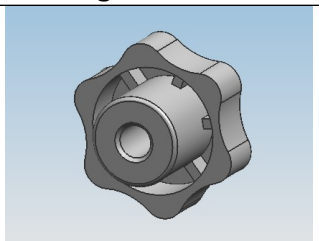
Before Installation





- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
	2	 Cross Bar		1	 Left Bracket
	1	 Right Bracket		2	 Clamp plate
	2	 Locking Knob		2	 Cargo Bag

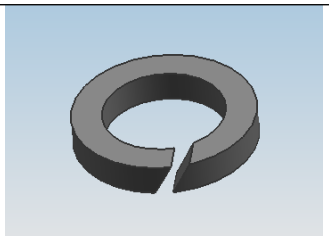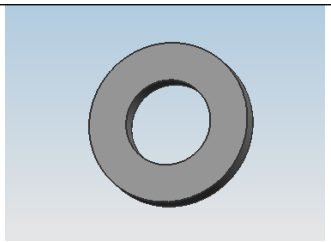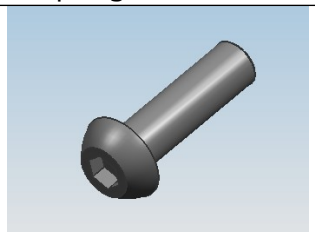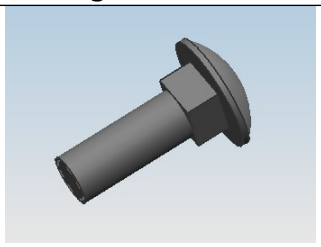	2	 Spring Washer D6		2	 Large Washer D6
	2	 Button Head Allen Bolts M6_20		2	 Square Hex Bolt M10_30

Installation

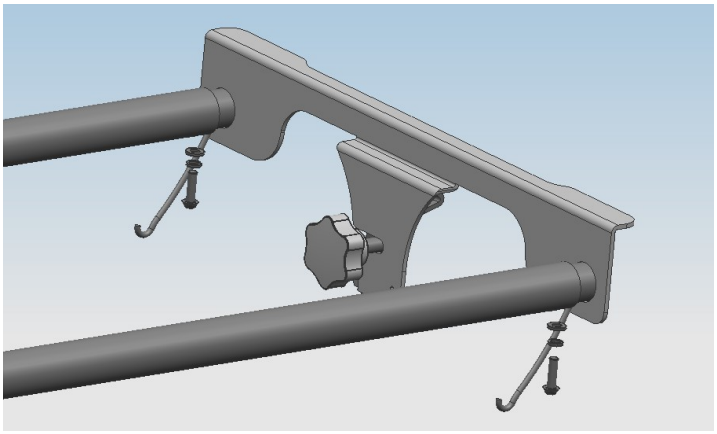
Step 1：Check all the contents if are available in accordance with the above list.

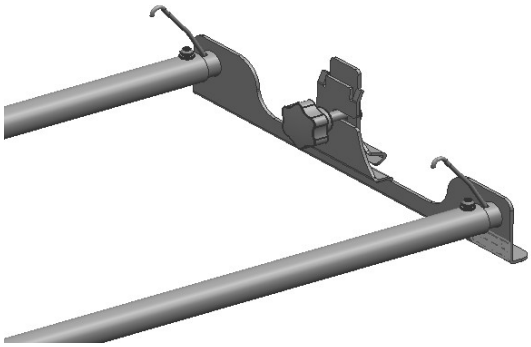
Step 2：Remove all parts from box. Unpack cargo bag and slide one rigid plastic panel (two are provided) into each pocket on inside bottom of bag first! These panels create a rigid floor for the cargo bag.

Step 3: Slide the cargo bad onto the cross bars as shown in following picture.




Step3：Install the cross bar ends into Left and fully tighten hardware .








Step 4：Install the other end of the cross bar to the right bracket.

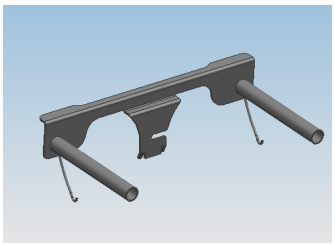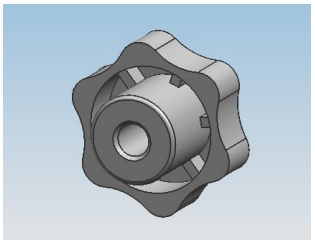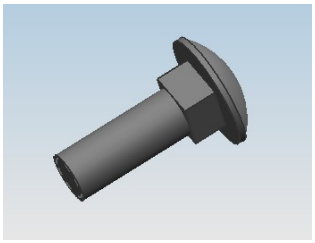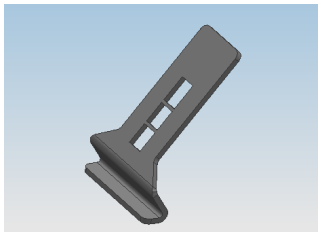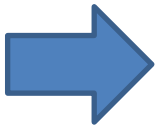
Step 5：Put above assembly to your truck bed, adjust it to best width and position fits your truck bed rail, and then Install the clamp plate and knob as shown in following pictures, Tighten as needed to prevent unit from sliding on truck bed rail.

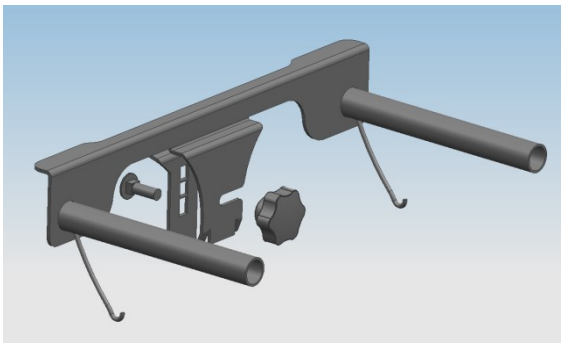














Step 6：Once frame is completely installed on the truck, including the Rail Locking System and

knobs, secure the bag with the hooks. The goal is to center the bay on the frame. This can be done by untying the knot in an individual bungee piece and retying the knot in a more appropriate place This may take a few attempts to make correct. （Warning! Over-tightening locking knobs may cause damage to Rail Locking System.）

INSTALLATION INSTRUCTIONS



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.